

D-Link DSL-2730E

Wireless N 150 ADSL2+ Modem Router

User Manual



D-Link®
Building Networks for People



RECYCLABLE

2014/08/14

Ver. 1.00

Contents

1	Introduction.....	1
1.1	Packing List.....	1
1.2	Safety Precautions	1
1.3	LEDs and Interfaces.....	2
1.4	System Requirements	4
1.5	Features.....	4
2	Hardware Installation.....	6
3	Web Configuration.....	7
3.1	Accessing the Device	7
3.2	Setup	9
3.2.1	Wizard.....	9
3.2.2	Local Network.....	15
3.2.3	Internet Setup.....	24
3.2.4	Wireless Setup	31
3.2.5	Time and Date.....	36
3.3	Advanced.....	37
3.3.1	Advanced Wireless.....	38
3.3.2	Access Control List.....	43
3.3.3	Port Triggering.....	46
3.3.4	Port Forwarding.....	48
3.3.5	DMZ	49
3.3.6	Parental Control	49
3.3.7	Filtering Options	52
3.3.8	DoS Settings	55
3.3.9	DNS	56
3.3.10	Dynamic DNS.....	58
3.3.11	Network Tools.....	60
3.3.12	Routing.....	72
3.3.13	NAT	76
3.4	Maintenance	80
3.4.1	System	80
3.4.2	Firmware Update.....	82
3.4.3	Password	82

3.4.4	Diagnostics.....	83
3.4.5	System Log	86
3.4.6	Logout	88
3.5	Status.....	88
3.5.1	Device Info	88
3.5.2	Wireless Clients.....	90
3.5.3	DHCP Clients	90
3.5.4	ADSL Driver	91
3.5.5	Statistics	91
3.5.6	Route Info.....	92
3.6	Help	93

1 Introduction

The DSL-2730E supports multiple line modes. With four 10/100 base-T Ethernet interfaces at the user end, the device provides high-speed ADSL broadband connection to the Internet or Intranet for high-end users like net bars and office users. It provides high performance access to the Internet with a downstream rate of 24 Mbps and an upstream rate of 1 Mbps. It supports IPV6.

The device supports WLAN access, such as WLAN AP or WLAN device, to the Internet. It complies with specifications of IEEE 802.11, 802.11b/g/n, WEP, WPA, and WPA2 security. The WLAN of the device supports 1T1R.

1.1 Packing List

- 1 x DSL-2730E
- 1 x external splitter
- 1 x power adapter
- 1 x telephone cables (RJ-11)
- 1 x Ethernet cable (RJ-45)
- 1 x QIG

1.2 Safety Precautions

Take the following instructions to prevent the device from risks and damage caused by fire or electric power:

- Use the type of power marked in the volume label.
- Use the power adapter in the product package.
- Pay attention to the power load of the outlet or prolonged lines. An overburden power outlet or damaged lines or plugs may cause electric shock or fire accidents. Check the power cords regularly. If you find any damage, replace it at once.
- Proper space left for heat dissipation is necessary to avoid damage caused by overheating to the device. The long and thin holes on the device are designed for heat dissipation to ensure that the device works normally. Do not cover these heat dissipation holes.

- Do not put this device close to a heat source or under a high temperature occurs. Keep the device away from direct sunshine.
- Do not put this device close to an overdamp or watery place. Do not spill fluid on this device.
- Do not connect this device to a PC or electronic product unless instructed by our customer engineer or your broadband provider. Wrong connection may cause power or fire risk.
- Do not place this device on an unstable surface or support.

1.3 LEDs and Interfaces

Note:



The figures in this document are for reference only.





Front Panel



Figure 1 Front panel

The following table describes the LEDs of the device.

LED	Color	Status	Description
 Power	Green	Off	The power is off.
		On	The power is on and the initialization is normal.
	Red	On	The device is initiating.
		Blinks	The firmware is upgrading.
 LAN 1/2/3/4	Green	Off	No LAN link.
		Blinks	Data is being transmitted through the LAN interface.
		On	The connection of LAN interface is normal.

LED	Color	Status	Description
 WLAN	Green	Blinks	Data is transmitted through the WLAN interface.
		On	The connection of WLAN interface is normal.
		Off	The WLAN connection is not established.
 WPS	Blue	Blinks	WPS negotiation is enabled, waiting for the clients.
		Off	WPS negotiation is not enabled on the device.
 DSL	Green	Off	Initial self-test is failed.
		Blinks	The device is detecting itself.
		On	Initial self-test of the unit has passed and is ready.
 Internet	Green	Off	The device is under the Bridge mode, DSL connection is not present, or the power is off.
		Blinks	Internet data is being transmitted in the routing mode.
		On	IP is connected.
	Red	On	The device is attempted to become IP connected, but failed.

Rear Panel

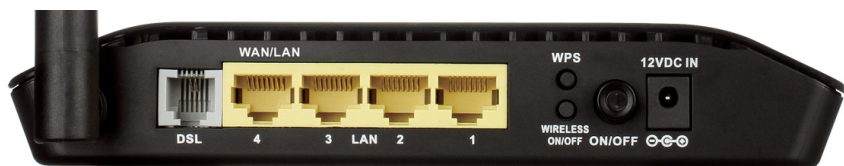



Figure 2 Rear panel

The following table describes the interface of the device.

Interface/Button	Description
	Antenna position
DSL	RJ-11 interface that connects to the telephone set through the telephone cable.
LAN4/3/2/1	Ethernet RJ-45 interfaces that connect to the Ethernet interfaces of computers or Ethernet devices.
WPS	Press the button for 1 second to enable WPS function.
WIRELESS ON/OFF	Press the button silently to enable WLAN function.
ON/OFF	Power on or off the device.
12V DCIN	Interface that connects to the power adapter. The power adapter output is: 12V DC, 500mA.
Reset (on the bottom case)	Reset to the factory defaults. To restore factory defaults, keep the device powered on and push a paper clip into the hole. Press down the button for 1 second and then release.

1.4 System Requirements

- A 10 baseT/100BaseT Ethernet card installed on your PC
- A hub or switch (attached to several PCs through one of Ethernet interfaces on the device)
- Operating system: Windows Vista, Windows 7, Windows 98SE, Windows 2000, Windows ME or Windows XP
- Internet Explorer V5.0 or higher, Netscape V4.0 or higher, or Firefox 1.5 or higher

1.5 Features

- Various line modes
- External PPPoE dial-up access
- Internal PPPoE and PPPoA dial-up access
- Leased line mode
- 1483B, 1483R, and MER access

- Multiple PVCs (eight at most) and these PVCs can be isolated from each other
- A single PVC with multiple sessions
- Multiple PVCs with multiple sessions
- Binding of ports with PVCs
- 802.1Q and 802.1P protocol
- DHCP server
- NAT and NAT
- Static route
- Firmware upgrade: Web, TFTP, FTP
- Reset to the factory defaults
- DNS relay
- Virtual server
- DMZ
- Two-level passwords and user names
- Web user interface
- Telnet CLI
- System status display
- PPP session PAP and CHAP
- IP filter
- IP QoS
- Remote access control
- Line connection status test
- Remote management (telnet and HTTP)
- Backup and restoration of configuration file
- Ethernet interface supports crossover detection, auto-correction and polarity correction
- UPnP
- IPV6

2 Hardware Installation

Step 1 Connect the **DSL** port of the device and the **Modem** port of the splitter with a telephone cable. Connect the phone to the **Phone** port of the splitter through a telephone cable. Connect the incoming line to the **Line** port of the splitter.

The splitter has three ports:

- Line: Connect to a wall phone port (RJ-11 jack).
- Modem: Connect to the DSL port of the device.
- Phone: Connect to a telephone set.

Step 2 Connect a **LAN** port of the device to the network card of the PC through an Ethernet cable (MDI/MDIX).

Note:

Use twisted-pair cables to connect the device to a Hub or switch.

Step 3 Plug one end of the power adapter to the wall outlet and the other end to the **Power** port of the device.

Figure 3 displays the application diagram for the connection of the device, PC, splitter and telephone sets, when no telephone set is placed before the splitter.

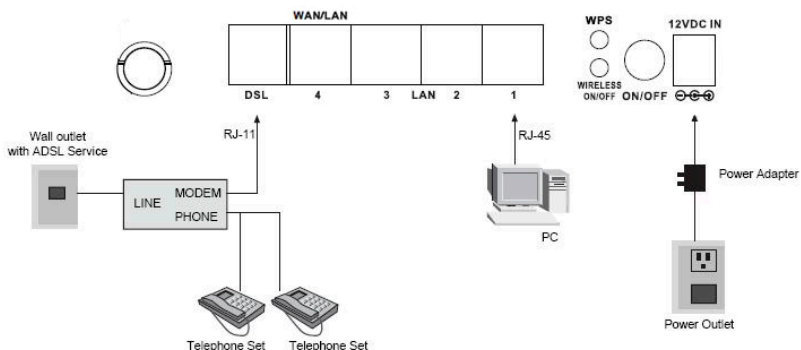


Figure 3 Connection diagram

3 Web Configuration

This chapter describes how to configure the device by using the Web-based configuration utility.

3.1 Accessing the Device

The following is the detailed description of accessing the device for the first time.

Step 1 Open the Internet Explorer (IE) browser and enter <http://192.168.1.1>.

Step 2 The **Login** page shown in the following figure appears. Enter the user name and password. The user name and password of the super user are **admin** and **admin**.



If you log in as the super user successfully, the page shown in the following figure appears. This page displays a summary overview of the router, including the system information, DSL information, LAN Configuration, DNS information and WAN Configuration.

Product Page: DSL-2730E
Firmware Version: SEA_1.00

DSL-2730E

Device Info
Wireless Clients
DHCP Clients
ADSL Driver
Statistics
Route Info

SETUP
ADVANCED
MAINTENANCE
STATUS

ADSL ROUTER STATUS

This page shows the current status and some basic settings of the device.

SYSTEM

Alias Name	RTL867x ADSL Modem
Firmware Version	SEA_1.00
Uptime	0 1:32:58
Date/Time	Thu Jan 1 1:32:58 1970
Built Date	Jan 17 2013 15:11:22
Serial Number	001111111111

DSL

Operational Status	--
Upstream Speed	--
Downstream Speed	--

LAN CONFIGURATION

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	Enable
MAC Address	00:11:11:11:11:11

WIRELESS INFO

Status:	Enabled
MAC Address:	00:05:1D:03:04:05
Network Name (SSID):	WLAN_01j0
Current Channel:	11
Encryption:	Disabled

DNS STATUS

DNS Mode	Auto
DNS Servers	
IPv6 DNS Mode	Auto
IPv6 DNS Servers	

WAN CONFIGURATION

Interface	VPI/VC 1	Encap	Droute	Protocol	IP Address	Gateway	Status
pppoe1	0/100	LLC	On	PPPoE	0.0.0.0	0.0.0.0	down

WAN IPV6 CONFIGURATION

Interface	VPI/VC1	Encap	Protocol	IPv6 Address	Gateway	Droute	Status
pppoe1	0/100	LLC	PPPoE				down

Refresh

BROADBAND

Helpful Hints...
This page displays a summary overview of your router, including system information, DSL information, LAN Configuration, DNS information, WAN Configuration and so on.
[More...](#)

Copyright © 2005-2012 D-Link Systems, Inc.

8

3.2 Setup

In the main interface, click **Setup** tab to enter the **Setup** menu as shown in the following figure. The submenus are **Wizard**, **Local Network**, **Internet Setup**, **Wireless Setup** and **Time and Date**.

3.2.1 Wizard

Wizard enables fast and accurate configuration of Internet connection and other important parameters. The following sections describe configuration parameters. When subscribing to a broadband service, you should be aware of the method, by which you are connected to the Internet. Your physical WAN device can be Ethernet, DSL, or both.

Technical information about the properties of your Internet connection is provided by your Internet service provider (ISP). For example, your ISP should inform you that you are connected to the Internet using a static or dynamic IP address, and the protocol you use to communicate over the Internet, i.g. PPPoA or PPPoE.

Choose **Setup > Wizard**. The page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard Local Network Internet Setup Wireless Setup Time and Date	<div> SETTING UP YOUR INTERNET <p>There are two ways to set up your Internet connection. You can use the Web-based Internet Connection Setup Wizard or you can manually configure the connection.</p> <p>Please make sure you have your ISP's connection settings first if you choose manual setup.</p> </div> <div> INTERNET CONNECTION WIZARD <p>You can use this wizard for assistance and quick connection of your new D-Link Router to the Internet. You will be presented with step-by-step instructions in order to get your Internet connection up and running. Click the button below to begin.</p> <p style="text-align: center;"> <input type="button" value="Setup Wizard"/> </p> <p>Note: Before launching the wizard, please ensure you have correctly followed the steps outlined in the Quick Installation Guide included with the router.</p> </div>				Helpful Hints... <p>First time users are recommended to run the Setup Wizard. Click the Setup Wizard button and you will be guided step by step through the process of setting up your ADSL connection.</p> <p>If you consider yourself an advanced user or have configured a router before, click Setup > Internet Setup to input all the settings manually.</p> <p>More...</p>

Click **Setup Wizard**. The page shown in the following figure appears.

WELCOME TO D-LINK SETUP WIZARD

This wizard will guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.

- **Step 1:** Change Device Login Password
- **Step 2:** Set Time and Date
- **Step 3:** Setup Internet Connection
- **Step 4:** Configure Wireless Network
- **Step 5:** Completed and Apply

There are 5 steps to configure the device. Click **Next** to continue.

Step 1 Change the device login password.

STEP 1: CHANGE DEVICE LOGIN PASSWORD → 2 → 3 → 4 → 5

To help secure your network, D-Link recommends that you should choose a new password. If you do not wish to choose a new password now, just click "Skip" to continue. Click "Next" to proceed to next step.

Current Password :

New Password :

Confirm Password :

Step 2 Set the time and date.

1 → STEP 2: SET TIME AND DATE → 3 → 4 → 5

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the NTP (Network Time Protocol) Server. Daylight Saving can also be configured to automatically adjust the time when needed.

SYSTEM TIME

System time: Thu Jan 1 11:49:55 1970

Time Zone: (GMT) Gambia, Liberia, Morocco, England ▼

DayLight: LocalTIME ▼

Mode: Copy Computer time ▼

Step 3 Configure the Internet connection.

1 → 2 → STEP 3: SETUP INTERNET CONNECTION → 4 → 5

Please select your Country and ISP (Internet Service Provider) from the list below. If your Country or ISP is not in the list, please select "Others".

Country : (Click to Select) ▾
Internet Service Provider : (Click to Select) ▾
Protocol : (Click to Select) ▾
Connection Type : (Click to Select) ▾
VPI : (Enter a number) (0-255)
VCI : (Enter a number) (32-65535)

Back Next Cancel

If the internet service you subscribed is **PPPoE** or **PPPoA**, you can choose the **Protocol** to be **PPPoE** or **PPPoA**. Set the VPI and VCI. Enter the user name and password provided by your ISP.

1 → 2 → STEP 3: SETUP INTERNET CONNECTION → 4 → 5

Please select your Country and ISP (Internet Service Provider) from the list below. If your Country or ISP is not in the list, please select "Others".

Country : Australia ▾
Internet Service Provider : AAPT ▾
Protocol : PPPoE ▾
Connection Type : LLC ▾
VPI : 8 (0-255)
VCI : 35 (32-65535)

PPPoE

Please enter your Username and Password as provided by your ISP (Internet Service Provider). Please enter the information exactly as shown taking note of upper and lower cases. Click "Next" to continue.

Username :
Password :
Confirm Password :

Back Next Cancel

If the internet service you subscribed is **Dynamic IP**, you can choose **Protocol** to be **Dynamic IP**. The page shown in the following figure appears.

1 → 2 → **STEP 3: SETUP INTERNET CONNECTION** → 4 → 5

Please select your Country and ISP (Internet Service Provider) from the list below. If your Country or ISP is not in the list, please select "Others".

Country :	Australia	▼
Internet Service Provider :	AAPT	▼
Protocol :	Dynamic IP	▼
Connection Type :	LLC	▼
VPI :	8	(0-255)
VCI :	35	(32-65535)

Back Next Cancel

If the Protocol is **Static IP**, you can choose **Protocol** to be **Static IP**. The page shown in the following figure appears. Enter the **IP Address**, **Subnet Mask**, **Default Gateway** and **Primary DNS Server** provided by your ISP.

1 → 2 → STEP 3: SETUP INTERNET CONNECTION → 4 → 5

Please select your Country and ISP (Internet Service Provider) from the list below. If your Country or ISP is not in the list, please select "Others".

Country : Australia
Internet Service Provider : AAPT
Protocol : Static IP
Connection Type : LLC
VPI : 8 (0-255)
VCI : 35 (32-65535)

STATIC IP

You have selected Static IP Internet connection. Please enter the appropriate information below as provided by your ISP.

The Auto PVC Scan feature will not work in all cases so please enter the VPI/VCI numbers if provided by the ISP.

Click Next to continue.

IP Address : 0.0.0.0
Subnet Mask : 0.0.0.0
Default Gateway :
Primary DNS Server :

Back Next Cancel

If the Protocol is **Bridge**, the page shown in the following figure appears.

1 → 2 → STEP 3: SETUP INTERNET CONNECTION → 4 → 5

Please select your Country and ISP (Internet Service Provider) from the list below. If your Country or ISP is not in the list, please select "Others".

Country : Australia
Internet Service Provider : AAPT
Protocol : Bridge
Connection Type : LLC
VPI : 8 (0-255)
VCI : 35 (32-65535)

Back Next Cancel

Step 4 Configure the wireless network.

1 → 2 → 3 → **STEP 4: CONFIGURE WIRELESS NETWORK** → 5

Your wireless network is enabled by default. You can simply uncheck it to disable it and click "Next" to skip configuration of wireless network.

☒ **Enable Your Wireless Network**

Your wireless network needs a name so it can be easily recognized by wireless clients. For security purposes, it is highly recommended to change the pre-configured network name.

Wireless Network Name (SSID) : (1~32 characters)

Select "Visible" to publish your wireless network and SSID can be found by wireless clients, or select "Invisible" to hide your wireless network so that users need to manually enter SSID in order to connect to your wireless network.

Visibility Status : ☒ Visible ☐ Invisible

In order to protect your network from hackers and unauthorized users, it is highly recommended you choose one of the following wireless network security settings.

Security Level :

☐ None ☐ WEP ☐ WPA-PSK ☒ WPA2-PSK

Security Mode: WPA-PSK
Select this option if your wireless adapters support WPA-PSK.

Now, please enter your wireless security key.

WPA2 Pre-Shared Key :

(8-63 characters, such as a~z, A~Z, or 0~9, i.e. '%Fortress123&')

Note: You will need to enter the same key here into your wireless clients in order to enable proper wireless connection.

Step 5 Complete and apply the settings. Click **Apply** to save the settings.

1 → 2 → 3 → 4 → STEP 5: COMPLETED AND APPLY

Setup complete. Click "Back" to review or modify settings. Click "Apply" to apply current settings.

If your Internet connection does not work after apply, you can try the Setup Wizard again with alternative settings or use Manual Setup instead if you have your Internet connection details as provided by your ISP.

SETUP SUMMARY

Below is a detailed summary of your settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Time Settings :	Copy from Computer
VPI / VCI :	8/35
Protocol :	Bridge
Connection Type :	LLC
Wireless Network :	Enabled
Wireless Network Name (SSID) :	WLAN_0jj0
Visibility Status :	Visible
Encryption :	WPA2-PSK/AES (also known as WPA2 Personal)
Pre-Shared Key :	%Fortress123

Back

Apply

Cancel

**Note:**

In each step of the Wizard page, you can click **Back** to review or modify the previous settings. Click **Cancel** to exit the wizard page.

3.2.2 Local Network

You can configure the LAN IP address according to the actual application. The preset IP address is 192.168.1.1. You can use the default settings and DHCP service to manage the IP settings for the private network. The IP address of the device is the base address used for DHCP. To use the device for DHCP on your LAN, the IP address pool used for DHCP must be compatible with the IP address of the device. The IP address available in the DHCP IP address pool changes automatically if you change the IP address of the device.

You can also enable the secondary LAN IP address. The two LAN IP addresses must be in different networks.

3.2.2.1 LAN Interface

Choose **Setup > Local Network > LAN Interface**. The **LAN Setting** page shown in the following figure appears. You may configure the LAN interface, for example, the IP address and subnet mask.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																	
Wizard Local Network Internet Setup Wireless Setup Time and Date	<div> LAN SETTING <p>This page is used to configure the LAN interface of your ADSL Router. Here you may change the setting for IP address, subnet mask, etc..</p> </div> <div> LAN INTERFACE SETTINGS <p>Interface Name: e1</p> <p>IP Address: <input type="text" value="192.168.1.1"/></p> <p>Subnet Mask: <input type="text" value="255.255.255.0"/></p> <p><input type="checkbox"/> Secondary IP</p> <p>IGMP Snooping: <input checked="" type="radio"/> Disable <input type="radio"/> Enable</p> <p><input type="button" value="Apply Changes"/></p> </div> <div> LAN LINK MODE SETTINGS <p>LAN Port: <input type="text" value="1"/></p> <p>Link Speed/Duplex Mode: <input type="text" value="100M Full Duplex"/></p> <p><input type="button" value="Modify"/></p> <table border="1"> <caption>ETHERNET Status Table:</caption> <thead> <tr> <th>Select</th> <th>Port</th> <th>Link Mode</th> </tr> </thead> <tbody> <tr> <td><input type="radio"/></td> <td>LAN1</td> <td>AUTO Negotiation</td> </tr> <tr> <td><input type="radio"/></td> <td>LAN2</td> <td>AUTO Negotiation</td> </tr> <tr> <td><input type="radio"/></td> <td>LAN3</td> <td>AUTO Negotiation</td> </tr> <tr> <td><input type="radio"/></td> <td>LAN4</td> <td>AUTO Negotiation</td> </tr> </tbody> </table> </div> <div> MAC ADDRESS CONTROL SETTINGS <p>MAC Address Control: <input type="checkbox"/> LAN1 <input type="checkbox"/> LAN2 <input type="checkbox"/> LAN3 <input type="checkbox"/> LAN4 <input type="checkbox"/> WLAN</p> <p><input type="button" value="Apply Changes"/></p> </div> <div> <p>New MAC Address: <input type="text"/> <input type="button" value="Add"/></p> </div> <div> CURRENT ALLOWED MAC ADDRESS TABLE <table border="1"> <thead> <tr> <th>MAC Addr</th> <th>Action</th> </tr> </thead> <tbody> </tbody> </table> </div>				Select	Port	Link Mode	<input type="radio"/>	LAN1	AUTO Negotiation	<input type="radio"/>	LAN2	AUTO Negotiation	<input type="radio"/>	LAN3	AUTO Negotiation	<input type="radio"/>	LAN4	AUTO Negotiation	MAC Addr	Action	Helpful Hints... The IP address of your router is the same IP address you will use to access the web management interface of your router. More...
Select	Port	Link Mode																				
<input type="radio"/>	LAN1	AUTO Negotiation																				
<input type="radio"/>	LAN2	AUTO Negotiation																				
<input type="radio"/>	LAN3	AUTO Negotiation																				
<input type="radio"/>	LAN4	AUTO Negotiation																				
MAC Addr	Action																					

The following table describes the parameters in this page.

Field	Description
IP Address	Enter the IP address of LAN interface. It is recommended to use an address from a block reserved for private use. This address block is 192.168.1.1- 192.168.1.254.
Subnet Mask	Enter the subnet mask of LAN interface. The range of subnet mask is from 255.255.0.0-255.255.255.254.
Secondary IP	Select it to enable the secondary LAN IP address. The two LAN IP addresses must be in different subnets.
LAN Port	You may choose the LAN interface you want to configure.
Link Speed/ Duplex Mode	You may select one mode from the drop-downlist: 100Mbps/FullDuplex, 100Mbps/Half Duplex, 10Mbps/FullDuplex, 10Mbps/Half Duplex and Auto Negotiation.
MAC Address Control	It is the access control based on MAC address. Select it, and the host whose MAC address is listed in the Current Allowed MAC Address Table can access the modem.
Add	Enter MAC address, and then click this button to add a new MAC address.

3.2.2.2 LAN IPv6 Interface

Choose **Setup > Local Network > LAN IPv6 Interface**. The **LAN IPv6 Setting** page shown in the following figure appears. You may set LAN RA server work mode and LAN DHCPv6 server work mode.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	LAN IPV6 SETTING				
Local Network	This page is used to configure ipv6 lan setting. User can set lan RA server work mode and lan DHCPv6 server work mode.				
Internet Setup	LAN GLOBAL ADDRESS SETTING				
Wireless Setup	Global Address: <input type="text"/> / <input type="text"/>				
Time and Date	<input type="button" value="Apply Changes"/>				
	RA SETTING				
	Enable: <input checked="" type="checkbox"/> M Flag: <input type="checkbox"/> O Flag: <input type="checkbox"/> Max Interval: <input type="text" value="600"/> Secs Min Interval: <input type="text" value="200"/> Secs Prefix Mode: <input type="text" value="Auto"/>				
	<input type="button" value="Apply Changes"/>				
	DHCPV6 SETTING				
	DHCPv6 Mode: <input type="text" value="None"/>				
	<input type="button" value="Apply Changes"/>				

The following table describes the parameters of this page.

Field	Description
Global Address	Specify the LAN global ipv6 address. It can be assigned by ISP.
Enable	Enable or disable the Router Advertisement feature.
M Flag	Enable or disable the "Managed address configuration" flag in RA packet.
O Flag	Enable or disable the "Other configuration" flag in RA packet.
Prefix Mode	Specify the RA feature prefix mode: "Auto": the RA prefix will use WAN dhcp-pd prefix; "Manual": user will specify the prefix address, length, preferred time and valid time.
DHCPv6 Mode	Specify the dhcpv6 server mode: "None": close dhcpv6 server; "Manual": dhcpv6 server is opened and user

Field	Description
	<p>specifies the dhcpv6 server address pool and other parameters.</p> <p>“Auto”: dhcpv6 server is opened and it use WAN dhcp-pd prefix to generate address pool.</p>

3.2.2.3 DHCP Server

Choose **Setup > Local Network > DHCP Server**. The **DHCP Server Setting** page shown in the following figure appears. You may configure the DHCP mode.

DSL-2730E

SETUP **ADVANCED** **MAINTENANCE** **STATUS** **HELP**

Wizard
Local Network
Internet Setup
Wireless Setup
Time and Date

DHCP SERVER SETTING

This page can be used to config the DHCP mode:None,DHCP Relay or DHCP Server.
(1)Enable the DHCP Server if you are using this device as a DHCP server. This page lists the IP address pools available to hosts on your LAN. The device distributes numbers in the pool to hosts on your network as they request Internet access.
(2)Enable the DHCP Relay if you are using the other DHCP server to assign IP address to your hosts on the LAN. You can set the DHCP server ip address.
(3)If you choose "None", then the modem will do nothing when the hosts request a IP address.

DHCP SERVER SETTINGS

LAN IP: 192.168.1.1/255.255.255.0
DHCP Mode: DHCP Server
Interface: ☒ LAN1 ☒ LAN2 ☒ LAN3 ☒ LAN4 ☒ WLAN
☒ VAP0 ☒ VAP1 ☒ VAP2 ☒ VAP3

IP Pool Range: 192.168.1.2 - 192.168.1.254

Max Lease Time: 1440 minutes
Domain Name: domain.name
DNS Servers: 192.168.1.1

Helpful Hints...
If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, select **DHCP Mode:None** to disable this feature.
[More...](#)

The following table describes the parameters of this page.

Field	Description
DHCP Mode	If set to DHCP Server , the router can assign IP addresses, IP default gateway and DNS servers to the host in Windows95, Windows NT and other

Field	Description
	operation systems that support the DHCP client.
IP Pool Range	It specifies the first and last IP addresses in the IP address pool. The router assigns IP address in the IP pool range to the host.
Max Lease Time	The lease time determines the period that the host retains the assigned IP addresses before the IP addresses change.
Domain Name	Enter the domain name if you know. If you leave this blank, the domain name obtained by DHCP from the ISP is used. You must enter host name (system name) on each individual PC. The domain name can be assigned from the router through the DHCP server.
DNS Servers	You can configure the DNS server ip addresses for DNS Relay.

Click the button **Show Client** to display the page **Active DHCP Client Table** as shown below. It shows the IP addresses assigned to DHCP clients.

ACTIVE DHCP CLIENT TABLE

This table shows the assigned IP address, MAC address and time expired for each DHCP leased client.

ACTIVE DHCP CLIENT TABLE

Name	IP Address	MAC Address	Expiry	Type
------	------------	-------------	--------	------

The following table describes the parameters and buttons in this page:

Field	Description
IP Address	It displays the IP address assigned to the DHCP client from the router.
MAC Address	It displays the MAC address of the DHCP client. Each Ethernet device has a unique MAC address.

Field	Description
	The MAC address is assigned at the factory and it consists of six pairs of hexadecimal character, for example, 00-A0-C5-00-02-12.
Expiry	It displays the lease time. The lease time determines the period that the host retains the assigned IP addresses before the IP addresses change.
Refresh	Click it to refresh this page.

Click the button **Set VendorClass IP Range** to display the page **Device IP Range Set**. In this page, you can configure the IP address range based on the device type.

DEVICE IP RANGE SET

This page is used to configure the IP address range based on device type.

DEVICE IP RANGE SETUP

device name:

start address:

end address:

option60:

add

delete

modify

Close

IP RANGE TABLE:

Select device name start address end address default gateway option60

In the **DHCP Mode** field, choose **None**. The page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard Local Network Internet Setup Wireless Setup Time and Date	<h3>DHCP SERVER SETTING</h3> <p>This page can be used to config the DHCP mode:None,DHCP Relay or DHCP Server.</p> <p>(1)Enable the DHCP Server if you are using this device as a DHCP server. This page lists the IP address pools available to hosts on your LAN. The device distributes numbers in the pool to hosts on your network as they request Internet access.</p> <p>(2)Enable the DHCP Relay if you are using the other DHCP server to assign IP address to your hosts on the LAN. You can set the DHCP server ip address.</p> <p>(3)If you choose "None", then the modem will do nothing when the hosts request a IP address.</p> <hr/> <h4>DHCP SERVER SETTINGS</h4> <p>LAN IP: 192.168.1.1/255.255.255.0</p> <p>DHCP Mode: None</p> <p>Apply Changes Undo</p> <p>Set VendorClass IP Range</p>				<p>Helpful Hints...</p> <p>If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, select DHCP Mode:None to disable this feature.</p> <p>More...</p>

In the **DHCP Mode** field, choose **DHCP Relay**. The page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard Local Network Internet Setup Wireless Setup Time and Date	<h3>DHCP SERVER SETTING</h3> <p>This page can be used to config the DHCP mode:None,DHCP Relay or DHCP Server.</p> <p>(1)Enable the DHCP Server if you are using this device as a DHCP server. This page lists the IP address pools available to hosts on your LAN. The device distributes numbers in the pool to hosts on your network as they request Internet access.</p> <p>(2)Enable the DHCP Relay if you are using the other DHCP server to assign IP address to your hosts on the LAN. You can set the DHCP server ip address.</p> <p>(3)If you choose "None", then the modem will do nothing when the hosts request a IP address.</p> <hr/> <h4>DHCP SERVER SETTINGS</h4> <p>LAN IP: 192.168.1.1/255.255.255.0</p> <p>DHCP Mode: DHCP Relay</p> <p>Relay Server: 192.168.2.242</p> <p>Apply Changes Undo</p> <p>Set VendorClass IP Range</p>				<p>Helpful Hints...</p> <p>If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, select DHCP Mode:None to disable this feature.</p> <p>More...</p>

The following table describes the parameters and buttons of this page:

Field	Description
DHCP Mode	If set to DHCP Relay , the router acts a surrogate DHCP Server and relays the DHCP requests and responses between the remote server and the client.
Relay Server	Enter the DHCP server address provided by your ISP.
Apply Changes	Click it to save the settings of this page.

3.2.2.4 DHCP Reserved

Choose **Setup > Local Network > DHCP Reserved**. The **DHCP Static IP Configuration** page appears. This page lists the fixed IP/MAC address on your LAN. The device distributes the number configured to hosts on your network as they request Internet access.

DSL-2730E

Wizard

Local Network

Internet Setup

Wireless Setup

Time and Date

SETUP ADVANCED MAINTENANCE STATUS HELP

DHCP STATIC IP CONFIGURATION

This page lists the fixed IP/MAC address on your LAN. The device distributes the number configured to hosts on your network as they request Internet access.

DHCP STATIC IP SETTINGS

IP Address:

Mac Address: (ex. 00E086710502)

DHCP STATIC IP TABLE:

Select	IP Address	MAC Address
--------	------------	-------------

The following table describes the parameters of this page.

Field	Description
IP Address	Enter the specified IP address in the IP pool range, which is assigned to the host.
Mac Address	Enter the MAC address of a host on the LAN.
Add	After entering the IP address and MAC address, click this button to add them to the DHCP Static IP Table.
Delete Selected	Select a row in the DHCP Static IP Table, then click it, this row is deleted.
Undo	Click it to refresh this page.
DHCP Static IP Table	It shows the assigned IP address based on the MAC address.

3.2.3 Internet Setup

3.2.3.1 Channel Config


Choose **Setup > Internet Setup > Channel Config**. The **Channel Configuration** page appears. You may configure the parameters for the channel operation modes of your ADSL Router.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																																
Wizard	CHANNEL CONFIGURATION This page is used to configure the parameters for the channel operation modes of your ADSL Modem/Router. Note: When connect type of PPPoE and PPPoA only is "Manual", the "Connect" and "Disconnect" button will be enable.				Helpful Hints... When configuring the router to access the Internet, be sure to choose the correct Channel Mode from the list below. Please take care when entering your username and password as these are case sensitive. The majority of connection issues are caused by incorrect username or password combinations. Note: Be sure to restart the router for the new Internet Setting to take effect. More...																																
Local Network																																					
Internet Setup																																					
Wireless Setup																																					
Time and Date																																					
DEFAULT ROUTE SELECTION Default Route Selection: <input type="radio"/> Auto <input checked="" type="radio"/> Specified																																					
CHANNEL CONFIGURATION <div> <div> VPI: <input type="text" value="0"/> VCI: <input type="text" value="1483"/> </div> <div> Channel Mode: <input type="text" value="1483 Bridged"/> </div> </div> <div> Encapsulation: <input checked="" type="radio"/> LLC <input type="radio"/> VC-Mux </div> <div> Enable NAPT: <input type="checkbox"/> Enable IGMP: <input type="checkbox"/> </div> <div> 802.1q: <input checked="" type="radio"/> Disable <input type="radio"/> Enable </div> <div> VLAN ID(1-4095): <input type="text" value="0"/> </div>																																					
<div> <div> PPP Settings: <div> User Name: <input type="text"/> </div> <div> Password: <input type="text"/> </div> </div> <div> Type: <input type="text" value="Continuous"/> </div> <div> Idle Time (min): <input type="text"/> </div> </div>																																					
<div> <div> WAN IP Settings: <div> Type: <input checked="" type="radio"/> Fixed IP <input type="radio"/> DHCP </div> <div> Local IP Address: <input type="text"/> </div> <div> Remote IP Address: <input type="text"/> </div> <div> Netmask: <input type="text"/> </div> </div> <div> Default Route: <input type="radio"/> Disable <input checked="" type="radio"/> Enable <input type="radio"/> Auto </div> <div> Unnumbered <input type="checkbox"/> </div> </div>																																					
<div> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/> <input type="button" value="Add"/> <input type="button" value="Modify"/> <input type="button" value="Delete"/> <input type="button" value="Undo"/> <input type="button" value="Refresh"/> </div>																																					
CURRENT ATM VC TABLE: <table border="1"> <thead> <tr> <th>Select</th> <th>Inf</th> <th>Mod</th> <th>VPI</th> <th>VCI</th> <th>Enca</th> <th>NAP</th> <th>IGM</th> <th>DRo</th> <th>IP A</th> <th>Rem</th> <th>Net</th> <th>Use</th> <th>Unn</th> <th>Stat</th> <th>Edit</th> </tr> </thead> <tbody> <tr> <td><input type="radio"/></td> <td>pppoe1</td> <td>pppoe</td> <td>0</td> <td>100</td> <td>LLC</td> <td>On</td> <td>Off</td> <td>On</td> <td>0.0.0.0</td> <td>0.0.0.0</td> <td>25 5.25 5.25 5.25</td> <td>---</td> <td>---</td> <td>down</td> <td></td> </tr> </tbody> </table>						Select	Inf	Mod	VPI	VCI	Enca	NAP	IGM	DRo	IP A	Rem	Net	Use	Unn	Stat	Edit	<input type="radio"/>	pppoe1	pppoe	0	100	LLC	On	Off	On	0.0.0.0	0.0.0.0	25 5.25 5.25 5.25	---	---	down	
Select	Inf	Mod	VPI	VCI	Enca	NAP	IGM	DRo	IP A	Rem	Net	Use	Unn	Stat	Edit																						
<input type="radio"/>	pppoe1	pppoe	0	100	LLC	On	Off	On	0.0.0.0	0.0.0.0	25 5.25 5.25 5.25	---	---	down																							

The following table describes the parameters of this page.

Field	Description
Default Route Selection	You can select Auto or Specified .
VPI	The virtual path between two points in an ATM network, ranging from 0 to 255 .
VCI	The virtual channel between two points in an ATM network, ranging from 32 to 65535 (1 to 31 are reserved for known protocols)
Encapsulation	You can choose LLC and VC-Mux .
Channel Mode	You can choose 1483 Bridged , 1483 MER , PPPoE , PPPoA , 1483 Routed or IPoA .
Enable NAPT	Select it to enable Network Address Port Translation (NAPT) function. If you do not select it and you want to access the Internet normally, you must add a route on the uplink equipment. Otherwise, the access to the Internet fails. Normally, it is enabled.
Enable IGMP	You can enable or disable Internet Group Management Protocol (IGMP) function.
802.1q	You can select Disable or Enable . If enabled, you need to enter the VLAN ID.
VLAN ID	The value ranges from 1 to 4095 .
IP Protocol	When any channel mode except 1483 Bridged is selected, select an IP protocol from IPv4/IPv6 , IPv4 and IPv6 .
PPP Settings	
User Name	Enter the correct user name for PPP dial-up, which is provided by your ISP.
Password	Enter the correct password for PPP dial-up, which is provided by your ISP.
Type	You can choose Continuous , Connect on Demand or Manual .
Idle Time (min)	If the type is set to Connect on Demand , you need to enter the idle timeout time. Within the preset minutes, if the router does not detect the flow of the

Field	Description
	user continuously, the router automatically disconnects the PPPoE connection.
WAN IP Settings	
Type	<p>You can choose Fixed IP or DHCP.</p> <ul style="list-style-type: none"> ● If select Fixed IP, you should enter the local IP address, remote IP address and subnet mask. ● If select DHCP, the router is a DHCP client, the WAN IP address is assigned by the remote DHCP server.
Local IP Address	Enter the IP address of WAN interface provided by your ISP.
Remote IP Address	Enter the IP address of gateway provided by your ISP.
Netmask	Enter the subnet mask of the local IP address.
Default Route	Routing table entry is not clearly specified in the routing, as to any network prefix forwarding address.
Unnumbered	Select this checkbox to enable IP unnumbered function.
IPv6 WAN Setting	
Address Mode	When the channel mode is not set to 1483 Bridged , configure this interface as supporting Slaac or Static to generate wan ipv6 addresses.
Enable DHCPv6 Client	You may enable or disable dhcpv6 client on this interface. After enabling it, user may specify the dhcpv6 client request an address or prefix.

After a PPPoE ATM VC is added to the table, click  in the **PPPoE** mode, the page shown in the following figure appears. In this page, you can configure parameters of this PPPoE PVC.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard Local Network Internet Setup Wireless Setup Time and Date	PPP INTERFACE - MODIFY This page is used for advanced PPP interface configuration.				
PPP INTERFACE					
Protocol: PPPoE ATM VCC: 0/100 Login Name: <input type="text"/> Password: <input type="password"/> Authentication Method: <input type="button" value="AUTO"/> Connection Type: <input type="button" value="Continuous"/> Idle Time (s): <input type="text" value="0"/> Bridge: <input type="radio"/> Bridged Ethernet (Transparent Bridging) <input type="radio"/> Bridged PPPoE (implies Bridged Ethernet) <input checked="" type="radio"/> Disable Bridge AC-Name: <input type="text"/> Service-Name: <input type="text"/> 802.1q: <input checked="" type="radio"/> Disable <input type="radio"/> Enable VLAN ID(1-4095): <input type="text" value="0"/> MTU (1-1500): <input type="text" value="1492"/> Static IP: <input type="text"/> Source Mac address: <input type="text" value="00:11:11:11:11:12"/> (ex:00:E0:86:71:05:02) <input type="button" value="MACCLONE"/>					
<input type="button" value="Apply Changes"/> <input type="button" value="Return"/> <input type="button" value="Undo"/>					

The following table describes the parameters and buttons of this page:

Field	Description
Protocol	It displays the protocol type used for this WAN connection.
ATM VCC	The ATM virtual circuit connection assigned for this PPP interface (VPI/VCI).
Login Name	The user name provided by your ISP.
Password	The password provided by your ISP.
Authentication Method	You can choose AUTO , CHAP , or PAP .
Connection Type	You can choose Continuous , Connect on Demand , or Manual .
Idle Time (s)	If choose Connect on Demand , you need to enter the idle timeout time. Within the preset minutes, if the router does not detect the flow of the user continuously, the router automatically disconnects the PPPoE connection.
Bridge	You can select Bridged Ethernet , Bridged

Field	Description
	PPPoE, or Disable Bridge.
AC-Name	The accessed equipment type.
Service-Name	The service name.
802.1q	You can select Disable or Enable . After enable it, you need to enter the VLAN ID. The value ranges from 1 to 4095.
Source Mac address	The MAC address you want to clone.
MAC Clone	Click it to enable the MAC Clone function with the MAC address that is configured.
Apply Changes	Click it to save the settings of this page temporarily.
Return	Click it to return to the Channel Configuration page.
Undo	Click it to refresh this page.

3.2.3.2 ATM Settings

Choose **Setup > Internet Setup > ATM Settings**. The **ATM Settings** page appears. You may configure the parameters for the ATM of your ADSL Router. Here you may change the setting for VPI, VCI and QoS, etc.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																
Wizard Local Network Internet Setup Wireless Setup Time and Date	<div> ATM SETTINGS <p>This page is used to configure the parameters for the ATM of your ADSL Router. Here you may change the setting for VPI, VCI, QoS etc ...</p> </div> <div> ATM SETTING <p> VPI: <input type="text"/> QoS: <input type="text"/> UBR <input type="button" value="v"/> PCR: <input type="text"/> SCR: <input type="text"/> <input type="text"/> <input type="text"/> <input type="button" value="Apply Changes"/> <input type="button" value="Undo"/> </p> <table border="1"> <thead> <tr> <th>Select</th> <th>VPI</th> <th>VCI</th> <th>QoS</th> <th>PCR</th> <th>CDVT</th> <th>SCR</th> <th>MBS</th> </tr> </thead> <tbody> <tr> <td><input type="radio"/></td> <td>0</td> <td>100</td> <td>UBR</td> <td>6144</td> <td>0</td> <td>---</td> <td>---</td> </tr> </tbody> </table> </div>				Select	VPI	VCI	QoS	PCR	CDVT	SCR	MBS	<input type="radio"/>	0	100	UBR	6144	0	---	---	Helpful Hints... The listed PVC(VPI/VCI) has configured in Setup > Internet Setup, you can config ATM QoS, PCR, CDVT etc More...
Select	VPI	VCI	QoS	PCR	CDVT	SCR	MBS														
<input type="radio"/>	0	100	UBR	6144	0	---	---														

The following table describes the parameters of this page.

Field	Description
VPI	The virtual path identifier of the ATM PVC.
VCI	The virtual channel identifier of the ATM PVC.
QoS	The QoS category of the PVC. You can choose UBR , CBR , rt-VBR , or nrt-VBR .
PCR	Peak cell rate (PCR) is the maximum rate at which cells can be transmitted along a connection in the ATM network. Its value ranges from 1 to 65535.
CDVT	Cell delay variation tolerance (CDVT) is the amount of delay permitted between ATM cells (in microseconds). Its value ranges from 0 to 4294967295.
SCR	Sustained cell rate (SCR) is the maximum rate that traffic can pass over a PVC without the risk of cell loss. Its value ranges from 0 to 65535.
MBS	Maximum burst size (MBS) is the maximum number of cells that can be transmitted at the PCR. Its value ranges from 0 to 65535.

3.2.3.3 ADSL Settings

Choose **Setup > Internet Setup > ADSL Settings**. The **ADSL Settings** page appears. This page contains a modulation and capability section to be specified by your ISP. Consult with your ISP to select the correct settings for each. Click **Apply Changes** to finish.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	ADSL SETTINGS				Helpful Hints... Do not change these settings unless directed by your ISP. More...
Local Network	Adsl Settings.				
Internet Setup	ADSL SETTINGS				
Wireless Setup	ADSL modulation: <input type="checkbox"/> G.Lite <input checked="" type="checkbox"/> G.Dmt <input checked="" type="checkbox"/> T1.413 <input checked="" type="checkbox"/> ADSL2 <input checked="" type="checkbox"/> ADSL2+ AnnexL Option: <input checked="" type="checkbox"/> Enabled AnnexM Option: <input type="checkbox"/> Enabled ADSL Capability: <input checked="" type="checkbox"/> Bitswap Enable <input type="checkbox"/> SRA Enable				
Time and Date	<input type="button" value="Apply Changes"/>				

3.2.3.4 PVC Auto Search

Choose **Setup > Internet Setup > PVC Auto Search**. The **Auto PVC Configuration** page appears. You may configure PVC auto detect function. Here you can add/delete auto PVC search table.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																																
Wizard	AUTO PVC CONFIGURATION				Helpful Hints... Click Probe button to search current available PVC(VPI/VCI) from the following listed Current Auto-PVC Table when ISP supports. More...																																
Local Network	This page is used to configure pvc auto detect function. Here you can add/delete auto pvc search table.																																				
Internet Setup	Probe WAN PVC <input type="button" value="Probe"/>																																				
Wireless Setup	VPI: <input type="text"/> VCI: <input type="text"/> <input type="button" value="Add"/> <input type="button" value="Delete"/>																																				
Time and Date	Current Auto-PVC Table: <table border="1"> <thead> <tr> <th>PVC</th> <th>VPI</th> <th>VCI</th> </tr> </thead> <tbody> <tr><td>0</td><td>0</td><td>35</td></tr> <tr><td>1</td><td>8</td><td>35</td></tr> <tr><td>2</td><td>0</td><td>43</td></tr> <tr><td>3</td><td>0</td><td>51</td></tr> <tr><td>4</td><td>0</td><td>59</td></tr> <tr><td>5</td><td>8</td><td>43</td></tr> <tr><td>6</td><td>8</td><td>51</td></tr> <tr><td>7</td><td>8</td><td>59</td></tr> <tr><td>8</td><td>0</td><td>33</td></tr> <tr><td>9</td><td>1</td><td>32</td></tr> </tbody> </table>					PVC	VPI	VCI	0	0	35	1	8	35	2	0	43	3	0	51	4	0	59	5	8	43	6	8	51	7	8	59	8	0	33	9	1
PVC	VPI	VCI																																			
0	0	35																																			
1	8	35																																			
2	0	43																																			
3	0	51																																			
4	0	59																																			
5	8	43																																			
6	8	51																																			
7	8	59																																			
8	0	33																																			
9	1	32																																			

3.2.4 Wireless Setup

This section describes the wireless LAN and basic configuration. A wireless LAN can be as simple as two computers with wireless LAN cards communicating in a peer-to-peer network or as complex as a number of computers with wireless LAN cards communicating through access points which bridge network traffic to wired LAN.


3.2.4.1 Wireless Basics

Choose **Setup > Wireless Setup > Wireless Basics**. The **Wireless Basic Settings** page appears. You may configure the parameters for wireless LAN clients, which may connect to your access point. Here you may change wireless encryption settings as well as wireless network parameters.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	WIRELESS BASIC SETTINGS This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.				Helpful Hints... Changing your Wireless Network Name (SSID) is the first step in securing your wireless network. Change it to a familiar name that does not contain any personal information. For your wireless device to connect to your router, you will need to manually enter the Wireless Network Name (SSID) on each device. (Please take a note of your SSID and keep it to hand.) More...
Local Network	WIRELESS NETWORK SETTINGS <div> <input type="checkbox"/> Disable Wireless LAN Interface </div> <div> Band: 2.4 GHz (B+G+H) </div> <div> Mode: AP </div> <div> SSID: WLAN_010 </div> <div> Channel Number: Auto Current Channel: 11 </div> <div> Radio Power (Percent): 100% </div> <div> Associated Clients: Show Active Clients </div>				
Internet Setup	WIRELESS OPTIONS <div> Channel Width: 20MHZ </div> <div> Control Sideband: Upper </div>				
Wireless Setup	Apply Changes				
Time and Date					

The following table describes the parameters in this page.

Field	Description
Band	Choose the working mode of the modem. You can choose from the drop-down list.

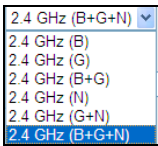Field	Description
	
Mode	Choose the network model of the modem, which is varied according to the software. By default, the network model of the modem is AP .
SSID	The service set identification (SSID) is a unique name to identify the modem in the wireless LAN. Wireless stations associating to the modem must have the same SSID. Enter a descriptive name that is used when the wireless client connecting to the modem.
Channel Number	Choose a channel from the drop-down list box. A channel is the radio frequency used by 802.11b/g wireless devices. There are 13 channels (from 1 to 13) available depending on the geographical area. You may have a choice of channels (for your region) and you should use a different channel from an adjacent AP to reduce the interference. Interference and degrading performance occurs when radio signal from different APs overlap.
Radio Power (Percent)	You can choose the transmission power of the radio signal. The default one is 100% . It is recommended to choose the default value 100% .
Show Active Clients	Click it to view the information of the wireless clients connected to the modem.
Channel Width	Select the appropriate band of 20MHZ or 40MHZ according to your subscribed broadband service.
Control Sideband	Choose the channel selection mode as Upper or Lower .

Click the button **Show Active Clients** to view the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client.

ACTIVE WIRELESS CLIENT TABLE					
This table shows the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client					
ACTIVE WIRELESS CLIENT TABLE					
MAC Address	Tx Packet	Rx Packet	Tx Rate (Mbps)	Power Saving	Expired Time (s)
None	---	---	---	---	---
<div>Refresh</div> <div>Close</div>					

Click **Apply Changes** to save the settings.

3.2.4.2 Wireless Security

Choose **Setup > Wireless Setup > Wireless Security**. The **Wireless Security Settings** page appears. Turn on WEP or WPA using encryption keys could prevent any unauthorized access to your wireless network.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	WIRELESS SECURITY SETTINGS This page allows you to setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.				Helpful Hints... If you enable Wireless Security, make sure you write down the encryption key that you have configured. You need to enter this information on any device that you connect to your wireless network.
Local Network	WIRELESS SECURITY SETTINGS SSID TYPE: <input checked="" type="radio"/> Root <input type="radio"/> VAP1 <input type="radio"/> VAP2 <input type="radio"/> VAP3 <input type="radio"/> VAP4 Encryption: None Set WEP Key <input type="checkbox"/> Use 802.1x Authentication WPA Authentication Mode: <input type="radio"/> WEP 64bits <input type="radio"/> WEP 128bits <input type="radio"/> Enterprise (RADIUS) <input type="radio"/> Personal (Pre-Shared Key) Pre-Shared Key Format: Passphrase Pre-Shared Key: ***** Authentication RADIUS Server: Port 1812 less Password 0.0.0.0				More...
Internet Setup	Note: When encryption WEP is selected, you must set WEP key value.				
Wireless Setup	<div>Apply Changes</div>				
Time and Date					

The following table describes the parameters of this page:

Field	Description
Encryption	<p>Configure the wireless encryption mode. You can choose None, WEP, WPA (TKIP), WPA (AES), WPA2 (AES), WPA2 (TKIP) or WPA2 Mixed.</p> <ul style="list-style-type: none">● Wired equivalent privacy (WEP) encrypts data frames before transmitting over the wireless network.● Wi-Fi protected access (WPA) is a subset of the IEEE802.11i security specification draft.● WPA2 Mixed is the collection of WPA and WPA2 encryption modes. The wireless client establishes the connection between the modem through WPA or WPA2. <p>Key differences between WPA and WEP are in user authentication and improved data encryption.</p>
Set WEP Key	<p>It is available when you set the encryption mode to WEP. Click it, the Wireless WEP Key Setup page appears.</p>
WPA Authentication Mode	<ul style="list-style-type: none">● Select Personal (Pre-Shared Key), enter the pre-shared key in the Pre-Shared Key field.● Select Enterprise (RADIUS), enter the port, IP address, and password of the Radius server. You need to enter the username and password provided by the Radius server when the wireless client connects the modem. <p>If the encryption is set to WEP, the modem uses 802.1 X authentication, which is Radius authentication.</p>

Click **Set WEP Key**, and the page **Wireless WEP Key Setup** appears. You can choose a 64-bit or 128-bit encryption key, and select ASCII or Hex format for input values.

WIRELESS WEP KEY SETUP

This page allows you setup the WEP key value. You could choose use 64-bit or 128-bit as the encryption key, and select ASCII or Hex as the format of input value.

WIRELESS WEP KEY SETUP

SSID TYPE: ☒ Root ☐ VAP0 ☐ VAP1 ☐ VAP2 ☐ VAP3

Key Length: 64-bit

Key Format: ASCII (5 characters)

Default Tx Key: Key 1

Encryption Key 1: xx xx xx xx

Encryption Key 2: xx xx xx xx

Encryption Key 3: xx xx xx xx

Encryption Key 4: xx xx xx xx

Apply Changes
Close
Reset

The following describes the parameters of this page:

Field	Description
Key Length	Choose the WEP key length. You can Choose 64-bit or 128-bit .
Key Format	<ul style="list-style-type: none"> If you choose 64-bit, you can choose ASCII (5 characters) or Hex (10 characters). If you choose 128-bit, you can choose ASCII (13 characters) or Hex (26 characters).
Default Tx Key	Choose the index of WEP Key. You can choose Key 1 , Key 2 , Key 3 or Key 4 .
Encryption Key 1 to 4	<p>The Encryption keys are used to encrypt the data. Both the modem and wireless stations must use the same encryption key for data transmission.</p> <ul style="list-style-type: none"> If you choose 64-bit and ASCII (5 characters), enter any 5 ASCII characters. If you choose 64-bit and Hex (10 characters), enter any 10 hexadecimal characters. If you choose 128-bit and ASCII (13

Field	Description
	characters), enter any 13 ASCII characters. <ul style="list-style-type: none"> If you choose 128-bit and Hex (26 characters), enter any 26 hexadecimal characters.
Apply Changes	Click it to apply the settings temporarily. If you want to save the settings of this page permanently, click Save in the lower left corner.

Click **Apply Changes** to save the settings.

3.2.5 Time and Date

Choose **Setup > Time and Date**. The **System Time Configuration** page appears. In the page, you can configure, update and maintain the correct time on the internal system clock. You can set the time zone that you are in and the Network Time Protocol (NTP) server. You can also configure daylight saving to automatically adjust the time when needed.

DSL-2730E // **SETUP** **ADVANCED** **MAINTENANCE** **STATUS** **HELP**

Wizard
Local Network
Internet Setup
Wireless Setup
Time and Date

SYSTEM TIME CONFIGURATION

This page is used to configure the system time and Network Time Protocol(NTP) server. Here you can change the settings or view some information on the system time and NTP parameters.

SYSTEM TIME

System Time: 1970 Year Jan Hour 1 2 26 52

Time Zone: ((GMT) Gambia, Liberia, Morocco, England)

DayLight: LocalTIME

Mode: Set Time Manually

Apply Changes Reset

START NTP:

NTP Start: Get GMT Time

Helpful Hints...
Good timekeeping is important for accurate and related firewall...
More...

The following table describes the parameters in this page.

Field	Description
System Time	Displays the time currently maintained by the router. If this is incorrect, use the following options to configure the time correctly.

Field	Description
Time Zone	Select your local time zone from the dropdown list.
Daylight	Adjust the clock for daylight savings time.
Mode	To synchronize the time automatically with the Internet or your own computer, you may select Set Time Manually , Copy Computer Time or Set NTP Server Manually .
Get GMT Time	Synchronize to Greenwich Mean Time.

When the mode is set to **Set NTP Server Manually**, the following page will appear.

NTP CONFIGURATION:

State: ☒ Disable ☐ Enable

Server:

Server2:

Interval: Every hours

GMT time: Thu Jan 1 4:49:26 1970

The following table describes the parameters in this page.

Field	Description
State	Select Enable to synchronize the time automatically with Internet or your own computer.
Server	Select a Network Time Server for synchronization from the dropdown list. You may set two servers.
Interval	Specify the interval for synchronization with the time server.

3.3 Advanced

This section includes advanced features for network management, security and administrative tools to manage the device. You can view status and other information used to examine performance and for troubleshooting.

3.3.1 Advanced Wireless

This function is used to modify the standard 802.11g wireless radio settings. It is suggested not to change the defaults, as incorrect settings may reduce the performance of your wireless radio. The default settings provide the best wireless radio performance in most environments.

3.3.1.1 Advanced Settings

Choose **Advanced > Advanced Wireless > Wireless Advanced**. The page shown in the following figure appears. These settings are only for more technically advanced users who have sufficient knowledge about wireless LAN. Do not change these settings unless you know the effect of changes on the device.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	WIRELESS ADVANCED SETTINGS These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Access Point.				Helpful Hints... By default these options need not be changed for this router to operate with Wireless.
Access Control List	ADVANCED WIRELESS SETTINGS				More...
Port Triggering	Authentication Type: <input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto Fragment Threshold: <input type="text" value="2346"/> (256-2346) RTS Threshold: <input type="text" value="2347"/> (0-2347) Beacon Interval: <input type="text" value="100"/> (20-1024 ms) DTIM Interval: <input type="text" value="1"/> (1-255) Data Rate: <input type="text" value="Auto"/>				
Port Forwarding	Preamble Type: <input checked="" type="radio"/> Long Preamble <input type="radio"/> Short Preamble Broadcast SSID: <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled Relay Blocking: <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled Ethernet to Wireless Blocking: <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled Wifi Multicast to Unicast: <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled Aggregation: <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled Short GI: <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled				
DMZ	<input type="button" value="Apply Changes"/>				
Parent Control					
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

The following table describes the parameters in this page.

Field	Description
Fragment Threshold	Used to fragment packets which help improve performance in the presence of radio frequency (RF) interference.

Field	Description
RTS Threshold (Request to Send Threshold)	Determines the packet size of a transmission through the use of the router to help control traffic flow.
Beacon Interval	A packet of information that is sent from a connected device to all other devices where it announces its availability and readiness. A beacon interval is a period of time (sent with the beacon) before sending the beacon again. The beacon interval may be adjusted in milliseconds (ms).
DTIM Interval	Sets the wake-up interval for clients in power-saving mode.
Preamble Type	This is the length of the CRC (Cyclic Redundancy Check) block for communication between the router and wireless clients. High network traffic areas should select Short preamble type.
Broadcast SSID	With Disabled selected, no wireless clients will be able to see your wireless network when they scan to see what's available.

Click **Apply Changes** to save the settings.

3.3.1.2 Access Control

Choose **Advanced > Advanced Wireless > Access Control**. The page shown in the following figure appears. Incoming connection can be filtered on your wireless router based on their MAC addresses.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP			
Advanced Wireless	WIRELESS ACCESS CONTROL If you choose 'Allowed Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When 'Deny Listed' is selected, these wireless clients on the list will not be able to connect the Access Point.				Helpful Hints... Create a list of MAC addresses that you would either like to allow or deny users access to the wireless router. More...			
Access Control List	WIRELESS ACCESS CONTROL MODE Wireless Access Control Mode: <input type="button" value="Disable"/>							
Port Triggering	<input type="button" value="Apply Changes"/>							
Port Forwarding	WIRELESS ACCESS CONTROL SETTINGS MAC Address: <input type="text"/> (ex. 00E086710502)							
DMZ	<input type="button" value="Add"/> <input type="button" value="Reset"/>							
Parent Control	CURRENT ACCESS CONTROL LIST <table border="1"> <thead> <tr> <th>MAC Address</th> <th>Select</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> </tbody> </table>				MAC Address	Select		
MAC Address	Select							
Filtering Options	<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>							
DOS Settings								
DNS								
Dynamic DNS								
Network Tools								
Routing								
NAT								

Set the Wireless Access Control Mode to **Allow Listed** to enable white list function. Only the devices whose MAC addresses are listed in the **Current Access Control List** can access the modem.

Set the Wireless Access Control Mode to **Deny Listed** to enable black list function. The devices whose MAC addresses are listed in the **Current Access Control List** are denied to access the modem.

3.3.1.3 WPS

Choose **Advanced > Advanced Wireless > WPS**. The page shown in the following figure appears. With this feature, your wireless client automatically synchronize its setting and connect to the Access Point.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP						
Advanced Wireless	WI-FI PROTECTED SETUP										
Access Control List	This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client automatically synchronize its setting and connect to the Access Point in a minute without any hassle.										
Port Triggering	WIFI PROTECTED SETTINGS										
Port Forwarding	<input type="checkbox"/> Disable WPS WPS Status: <input checked="" type="radio"/> Configured <input type="radio"/> UnConfigured Self-PIN Number: 82644277 <input type="button" value="Regenerate PIN"/> PIN Configuration: <input type="button" value="Start PIN"/> Push Button Configuration: <input type="button" value="Start PBC"/>										
DMZ	<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>										
Parent Control	CURRENT KEY INFO										
Filtering Options	<table border="1"> <thead> <tr> <th>Authentication</th> <th>Encryption</th> <th>Key</th> </tr> </thead> <tbody> <tr> <td>Open</td> <td>None</td> <td>N/A</td> </tr> </tbody> </table>					Authentication	Encryption	Key	Open	None	N/A
Authentication	Encryption	Key									
Open	None	N/A									
DOS Settings	CLIENT PIN INFO										
DNS	Client PIN Number: <input type="text"/>										
Dynamic DNS	<input type="button" value="Start PIN"/>										
Network Tools											
Routing											
NAT											

There are two methods for the wireless client to establish connection with the modem through WPS.

For one method, click **Regenerate PIN** to generate a new PIN, and then click **Start PBC**. In the wireless client tool, enter the PIN which is generated by the modem to start connection. The client will automatically establish the connection with the modem through the encryption mode, and you need not to enter the key. For the other method, the wireless client generates PIN. In the above figure, enter PIN of the wireless client in the **Client PIN Number** field, then click **Start PIN** to establish the connection.



Note:

The wireless client establishes the connection with the modem through WPS negotiation. The wireless client must support WPS.

3.3.1.4 MBSSID

Choose **Advanced > Advanced Wireless > MBSSID**. The page shown in the following figure appears. In this page, you can set virtual access points (VAP), its SSID and authentication type.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	WIRELESS MULTIPLE BSSID SETUP				
Access Control List	This page allows you to set virtual access points(VAP). Here you can enable/disable virtual AP, and set its SSID and authentication type. click "Apply Changes" to take it effect.				
Port Triggering	WIRELESS MULTIPLE BSSID SETTINGS- VAP0				
Port Forwarding	<input type="checkbox"/> Enable VAP0 SSID: <input type="text" value="CTC-0000"/> broadcast SSID: <input checked="" type="radio"/> Enable <input type="radio"/> Disable Relay Blocking: <input type="radio"/> Enable <input checked="" type="radio"/> Disable Authentication Type: <input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto				
DMZ	WIRELESS MULTIPLE BSSID SETTINGS- VAP1				
Parent Control	<input type="checkbox"/> Enable VAP1 SSID: <input type="text" value="CTC-1111"/> broadcast SSID: <input checked="" type="radio"/> Enable <input type="radio"/> Disable Relay Blocking: <input type="radio"/> Enable <input checked="" type="radio"/> Disable Authentication Type: <input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto				
Filtering Options	WIRELESS MULTIPLE BSSID SETTINGS- VAP2				
DOS Settings	<input type="checkbox"/> Enable VAP2 SSID: <input type="text" value="CTC-2222"/> broadcast SSID: <input checked="" type="radio"/> Enable <input type="radio"/> Disable Relay Blocking: <input type="radio"/> Enable <input checked="" type="radio"/> Disable Authentication Type: <input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto				
DNS	WIRELESS MULTIPLE BSSID SETTINGS- VAP3				
Dynamic DNS	<input type="checkbox"/> Enable VAP3 SSID: <input type="text" value="CTC-3333"/> broadcast SSID: <input checked="" type="radio"/> Enable <input type="radio"/> Disable Relay Blocking: <input type="radio"/> Enable <input checked="" type="radio"/> Disable Authentication Type: <input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto				
Network Tools	<input type="button" value="Apply Changes"/>				
Routing					
NAT					

The device supports four virtual access points (VAPs). It is a unique name to identify the modem in the wireless LAN. Wireless stations associating to the modem must have the same name. Enter a descriptive name that is used when the wireless client is connecting to the modem.

3.3.2 Access Control List

Multiple connections are required by some applications, for example, internet games, video conferencing and Internet telephony. These applications have difficulties working through NAT (Network Address Translation). This section is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network.

3.3.2.1 Access Control List

Choose **Advanced > Access Control List > Access Control List**. The page shown in the following figure appears. In this page, you can permit the data packets from LAN or WAN to access the router. You can configure the IP address for Access Control List (ACL). If ACL is enabled, only the effective IP address in the ACL can access the router.

**Note:**

If you select **Enable** in ACL capability, ensure that your host IP address is in ACL list before it takes effect.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																							
Advanced Wireless	ACL CONFIGURATION You can specify what services are accessible from LAN or WAN parts. Entries in this ACL table are used to permit certain types of data packets from your local network or Internet network to the Gateway. Using of such access control can be helpful in securing or restricting the Gateway management.				Helpful Hints... You can enable/disable specified service from LAN or WAN. More...																							
Access Control List	ACL CONFIGURATION -- DIRECTION Direction Select: <input checked="" type="radio"/> LAN <input type="radio"/> WAN																											
Port Triggering	LAN ACL SWITCH CONFIGURATION LAN ACL Switch: <input checked="" type="radio"/> Enable <input type="radio"/> Disable																											
Port Forwarding	<input type="button" value="Apply"/>																											
DMZ	ACL SETTINGS IP Address: <input type="text"/> - <input type="text"/> (The IP 0.0.0.0 represent any IP) Services Allowed: <input checked="" type="checkbox"/> Any <input type="button" value="Add"/> <input type="button" value="Reset"/>																											
Parent Control	CURRENT ACL TABLE <table border="1"> <thead> <tr> <th>Select</th> <th>Direction</th> <th>IP Address/Interface</th> <th>Service</th> <th>Port</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>LAN</td> <td>0.0.0.0</td> <td>ping</td> <td>--</td> <td><input type="button" value="Delete"/></td> </tr> <tr> <td>1</td> <td>LAN</td> <td>0.0.0.0</td> <td>web</td> <td>--</td> <td><input type="button" value="Delete"/></td> </tr> <tr> <td>2</td> <td>LAN</td> <td>0.0.0.0</td> <td>telnet</td> <td>--</td> <td><input type="button" value="Delete"/></td> </tr> </tbody> </table>				Select	Direction	IP Address/Interface	Service	Port	Action	0	LAN	0.0.0.0	ping	--	<input type="button" value="Delete"/>	1	LAN	0.0.0.0	web	--	<input type="button" value="Delete"/>	2	LAN	0.0.0.0	telnet	--	<input type="button" value="Delete"/>
Select	Direction	IP Address/Interface	Service	Port	Action																							
0	LAN	0.0.0.0	ping	--	<input type="button" value="Delete"/>																							
1	LAN	0.0.0.0	web	--	<input type="button" value="Delete"/>																							
2	LAN	0.0.0.0	telnet	--	<input type="button" value="Delete"/>																							
Filtering Options																												
DOS Settings																												
DNS																												
Dynamic DNS																												
Network Tools																												
Routing																												
NAT																												

The following table describes the parameters and buttons of this page:

Field	Description
Direction Select	Select the router interface. You can select LAN or WAN . In this example, LAN is selected.
LAN ACL Switch	Select it to enable or disable ACL function.
IP Address	Enter the IP address of the specified interface. Only the IP address that is in the same network segment with the IP address of the specified interface can access the router.
Services Allowed	You can choose the following services from LAN: Web , Telnet , SSH , TFTP , SNMP and PING . You can also choose all the services.
Add	After setting the parameters, click it to add an entry

Field	Description
	to the Current ACL Table .
Reset	Click it to refresh this page.

When the direction of data packets is set to **WAN**, the page shown in the following figure appears.

The screenshot shows the DSL-2730E web interface. On the left is a sidebar menu with options: Advanced Wireless, Access Control List, Port Triggering, Port Forwarding, DMZ, Parent Control, Filtering Options, DOS Settings, DNS, Dynamic DNS, Network Tools, Routing, and NAT. The main content area has tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The ADVANCED tab is selected, showing the ACL CONFIGURATION section. A text box explains that entries in the ACL table are used to permit certain types of data packets from LAN or WAN parts. Below this, the 'Direction Select' has radio buttons for LAN and WAN, with WAN selected. The 'ACL SETTINGS' section includes 'WAN Setting' (Interface), 'WAN Interface' (ppoe1), and 'Services Allowed' (checkboxes for web, telnet, ssh, ftp, snmp, ping). At the bottom are 'Add' and 'Reset' buttons. A 'CURRENT ACL TABLE' section shows a table with 3 rows and 6 columns: Select, Direction, IP Address/Interface, Service, Port, and Action. The table contains three entries, all with Direction 'LAN' and Action 'Delete' buttons.

Select	Direction	IP Address/Interface	Service	Port	Action
0	LAN	0.0.0.0	ping	--	Delete
1	LAN	0.0.0.0	web	--	Delete
2	LAN	0.0.0.0	telnet	--	Delete

The following table describes the parameters and buttons of this page:

Field	Description
Direction Select	Select the router interface. You can select LAN or WAN . In this example, WAN is selected.
WAN Setting	You can choose Interface or IP Address .
WAN Interface	Choose the interface that permits data packets from WAN to access the router.

Field	Description
Services Allowed	You can choose the following services from WAN: Web, Telnet, SSH, TFTP, SNMP and PING . You can also choose all the services.
Add	After setting the parameters, click it to add an entry to the Current ACL Table .
Reset	Click it to refresh this page.

3.3.2.2 Access Control List IPv6

Choose **Advanced > Access Control List > Access Control List IPv6**. The page shown in the following figure appears. For configuration method, refer to *3.3.2.1 Access Control List*.

3.3.3 Port Triggering

Choose **Advanced > Port Triggering**. The page shown in the following figure appears. Port Triggering is a special form of Port Forwarding in which it requires an outgoing connection before allowing incoming connections on a single or multiple ports. Port Triggering is mostly used when your computer is behind a NAT router. It gives more flexibility than static port forwarding because you don't need to set it up for a specific computer.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																																																																					
Advanced Wireless	NAT PORTTRIGGER <p>Some applications require that specific ports in the Router's firewall be opened for access by the remote parties. Port Trigger dynamically opens up the "Relate Port" in the firewall when an application on the LAN initiates a TCP/UDP connection to a remote party using the "Match Port". The Router allows the remote party from the WAN side to establish new connections back to the application on the LAN side using the "Relate Port".</p> <p>Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.</p>				Helpful Hints... Use this feature if you are trying to execute one of the listed network applications and it is not communicating as expected. Check the Application Name drop down menu for a list of predefined applications. More...																																																																					
Access Control List	NAT PORT TRIGGER STATUS Nat Port Trigger: <input type="radio"/> Enable <input checked="" type="radio"/> Disable																																																																									
Port Triggering	<input type="button" value="Apply Changes"/>																																																																									
Port Forwarding	APPLICATION TYPE <input checked="" type="radio"/> Usual Application <input type="button" value="Select One"/> <input type="radio"/> User-defined Application Name: <input type="text"/> <table border="1"> <thead> <tr> <th>Start Match Port</th> <th>End Match Port</th> <th>Trigger Protocol</th> <th>Start Relate Port</th> <th>End Relate Port</th> <th>Open Protocol</th> <th>Nat Type</th> </tr> </thead> <tbody> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> <tr><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td><input type="text"/></td><td><input type="text"/></td><td>UDP</td><td>outgoing</td></tr> </tbody> </table> <input type="button" value="Apply Changes"/>					Start Match Port	End Match Port	Trigger Protocol	Start Relate Port	End Relate Port	Open Protocol	Nat Type	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing	<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP
Start Match Port	End Match Port	Trigger Protocol	Start Relate Port	End Relate Port	Open Protocol	Nat Type																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
<input type="text"/>	<input type="text"/>	UDP	<input type="text"/>	<input type="text"/>	UDP	outgoing																																																																				
DMZ	CURRENT PORTTRIGGER TABLE <table border="1"> <thead> <tr> <th>ServerName</th> <th>Trigger Protocol</th> <th>Direction</th> <th>Match Port</th> <th>Open Protocol</th> <th>Relate Port</th> <th>Action</th> </tr> </thead> <tbody> </tbody> </table>				ServerName	Trigger Protocol	Direction	Match Port	Open Protocol	Relate Port	Action																																																															
ServerName	Trigger Protocol	Direction	Match Port	Open Protocol	Relate Port	Action																																																																				
Parent Control																																																																										
Filtering Options																																																																										
DOS Settings																																																																										
DNS																																																																										
Dynamic DNS																																																																										
Network Tools																																																																										
Routing																																																																										
NAT																																																																										

Click the **Usual Application Name** drop-down menu to choose the application you want to set up for port triggering. When you have chosen an application the default Trigger settings will populate the table below.

If the application you want to set up isn't listed, click the **User-defined Application Name** radio button and type in a name for the trigger in the Custom application field. Configure the **Start Match Port**, **End Match Port**, **Trigger Protocol**, **Start Relate Port**, **End Relate Port**, **Open Protocol** and **Nat type**.

Click the **Apply changes** button to finish.

3.3.4 Port Forwarding

This function is used to open ports in your device and redirect data through those ports to a single PC on your network (WAN-to-LAN traffic). It allows remote users to access services on your LAN, such as FTP for file transfers or SMTP and POP3 for e-mail. The device accepts remote requests for these services at your global IP address. It uses the specified TCP or UDP protocol and port number, and redirects these requests to the server on your LAN with the LAN IP address you specify. Note that the specified private IP address must be within the available range of the subnet where the device is in.

Choose **Advanced > Port Forwarding**. The page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP								
Advanced Wireless Access Control List Port Triggering Port Forwarding DMZ Parent Control Filtering Options DOS Settings DNS Dynamic DNS Network Tools Routing NAT	<div> PORT FORWARDING <p>Port Forwarding allows you to direct incoming traffic from the WAN side (identified by Protocol and WAN port) to the internal server with a private IP address on the LAN side. Select Usual Service Name, and enter the LAN IP address and click "Apply Changes" to forward IP packets for this service to the specified server.</p> </div> <div> PORT FORWARDING SETUP <p> <input checked="" type="radio"/> Usual Service Name AUTH <input type="radio"/> User-defined Service Name Protocol TCP WAN Setting Interface WAN Interface popoe1 WAN Port 113 (ex. 5001:5010) LAN Open Port 113 LAN IP Address </p> <p>Apply Changes</p> </div> <div> CURRENT PORT FORWARDING TABLE <table border="1"> <thead> <tr> <th>ServerName</th> <th>Protocol</th> <th>Local IP Address</th> <th>Local Port</th> <th>WAN IP Address</th> <th>WAN Port</th> <th>State</th> <th>Action</th> </tr> </thead> <tbody> </tbody> </table> </div>				ServerName	Protocol	Local IP Address	Local Port	WAN IP Address	WAN Port	State	Action	Helpful Hints... <p>Check the Usual Service Name drop down menu for a list of predefined applications.</p> <p>If you do not see your application listed you can still define a new service.</p> <p>More...</p>
ServerName	Protocol	Local IP Address	Local Port	WAN IP Address	WAN Port	State	Action						

Click the **Usual Service Name** drop-down menu to choose the service you want to set up for port forwarding. When you have chosen a service, the default settings will populate the table below.

If the service you want to set up isn't listed, select the **User-defined Service Name** radio button and type in a service name. Configure the **Protocol**, **WAN Setting**, **WAN Interface**, **WAN Port**, **LAN Open Port** and **LAN IP Address**.

Click the **Apply changes** button to finish.

3.3.5 DMZ

DMZ is the abbreviation of the Demilitarized Zone. Since some applications are not compatible with NAT, the device supports the use of a DMZ IP address for a single host on the LAN. This IP address is not protected by NAT and it is visible to agents on the Internet with the correct type of software. Note that any client PC in the DMZ is exposed to various types of security risks. If you use the DMZ, take measures (such as client-based virus protection) to protect the remaining client PCs on your LAN from possible contamination through DMZ.

Choose **Advanced > DMZ**. The page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	DMZ A Demilitarized Zone is used to provide Internet services without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP (e-mail) servers and DNS servers.				Helpful Hints... Enable the DMZ option only as a last resort. If you are having trouble using an application from a computer behind the router, first try opening ports associated with the application in the Advanced -> Port Triggering section. More...
Access Control List	DMZ CONFIGURATION <input type="checkbox"/> Enable DMZ DMZ Host IP Address: <input type="text"/> <input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>				
Port Triggering					
Port Forwarding					
DMZ					
Parent Control					
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

In the DMZ Host IP Address, input the LAN IP address of the LAN computer that you want to have unrestricted Internet communication. If this computer obtains its address automatically using DHCP, then you may want to make a static reservation on the Setup-->Local Network-->DHCP Reserved page so that the IP address of the DMZ computer does not change.

Click **Apply** to save the settings.

3.3.6 Parental Control

You may create a list of websites that you would like the devices on your network to be denied access to. **URL Block** allows you to quickly create a list of all websites that you wish to stop users from accessing. **MAC Filter** allows you to control when clients or PCs connected to the device are allowed to access the Internet.

3.3.6.1 URL Block

Choose **Advanced > Parental Control > URL Block**. The **URL Block** page shown in the following figure appears. You may deny certain websites from being accessed during the "schedule" you specified. Here you can add/delete filtered URL.



Note:

To use this feature, the time of router must be correct. Please set in 3.2.5 Time and Date.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP										
Advanced Wireless Access Control List Port Triggering Port Forwarding DMZ Parent Control Filtering Options DOS Settings DNS Dynamic DNS Network Tools Routing NAT	<div> URL BLOCK <p>This page is used to configure the blocked URL in specified time. Here you can add/delete filtered URL. Firstly, you should enable URL Blocking Capability.</p> <p>Note: To use this feature, the time of router must be correct. Please set in SETUP -- Time and Date.</p> </div> <div> URL BLOCKING CAPABILITY <p>URL Blocking Capability: <input type="radio"/> Disable <input checked="" type="radio"/> Enable</p> <p>Apply Changes</p> </div> <div> URL BLOCKING <p><input type="checkbox"/> Block Any URL</p> <p><input checked="" type="radio"/> URL: <input type="text" value="http://"/></p> <p>Schedule Mode: <input type="radio"/> Existing Schedule <input checked="" type="radio"/> Manual Schedule</p> <p>Schedule: View Available Schedules</p> <p>Days: <input type="checkbox"/> EveryDay</p> <p><input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed</p> <p><input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat</p> <p>All day(24Hour): <input type="checkbox"/></p> <p>Time: From <input type="text"/> : <input type="text"/> To <input type="text"/> : <input type="text"/> (e.g. From 09:21 To 18:30)</p> <p>Add Filter</p> </div> <div> URL BLOCKING TABLE: <table border="1"> <thead> <tr> <th>Select</th> <th>Filtered URL</th> <th>Days</th> <th>Time</th> <th>Rule Name</th> </tr> </thead> <tbody> <tr> <td colspan="5">Delete Selected URL</td> </tr> </tbody> </table> </div>				Select	Filtered URL	Days	Time	Rule Name	Delete Selected URL					Helpful Hints... <p>Create a list of websites that you would like the devices on your network to be denied access to</p> <p>Select a schedule for when the rule will be enabled. If you do not see the schedule you need in the list of schedules, go to Advanced -> Parent Control -> Schedules.</p> <p>More...</p>
Select	Filtered URL	Days	Time	Rule Name											
Delete Selected URL															

In the field **Schedule Mode**, you may select an existing schedule schedule for when the rule will be enabled, or manually set a schedule. After setting, click **Add Filter** to add the URL into the **URL Blocking Table**. To add schedules, refer to 3.3.6.3 Schedules.

3.3.6.2 MAC Block

Choose **Advanced > Parental Control > MAC Block**. The **URL Block** page shown in the following figure appears. You may block a LAN device connected to the router in the specified time section.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP									
Advanced Wireless	MAC BLOCK This page is used to block a LAN device connected to the router in the specified time section. To find out the MAC address of a Windows-based PC, open a command prompt window and type "ipconfig /all".				Helpful Hints... Give each rule a name that is meaningful to you. For example, a schedule for Monday through Friday from 3:00pm to 9:00pm, might be called "After School" and enter the MAC address that you want to deny access to the Internet. More...									
Access Control List	MAC BLOCKING <div> Rule Name: <input type="text"/> MAC Address: <input type="text"/> (Ex. 00:E0:86:71:05:02) Days: <input type="checkbox"/> EveryDay <input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat All day(24Hour): <input type="checkbox"/> Time: From <input type="text"/> : <input type="text"/> : <input type="text"/> To <input type="text"/> : <input type="text"/> : <input type="text"/> (e.g. From 09:21 To 18:30) </div> <div> <input type="button" value="Add Rule"/> </div> <div> MAC BLOCKING TABLE: <table border="1"> <thead> <tr> <th>Select</th> <th>Rule name</th> <th>MAC</th> <th>Days</th> <th>Time</th> </tr> </thead> <tbody> <tr> <td colspan="5"> <input type="button" value="Delete Selected"/> </td> </tr> </tbody> </table> </div>					Select	Rule name	MAC	Days	Time	<input type="button" value="Delete Selected"/>			
Select	Rule name	MAC	Days	Time										
<input type="button" value="Delete Selected"/>														
Port Triggering														
Port Forwarding														
DMZ														
Parent Control														
Filtering Options														
DOS Settings														
DNS														
Dynamic DNS														
Network Tools														
Routing														
NAT														

In the field **Rule Name**, input a name that is meaningful to you, then enter a MAC address that you want to deny access to the Internet, and set the days and hours, and click Add Rule to add the MAC into the **MAC Blocking Table**.

3.3.6.3 Schedules

Choose **Advanced > Parental Control > Schedules**. The **Schedules** page shown in the following figure appears. You may add or delete scheduling rules to be applied for URL block.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP							
Advanced Wireless	SCHEDULES Schedule allows you to create scheduling rules to be applied for URL block.				Helpful Hints... Schedules are used with a number of other features to define when those features are in effect. Give each schedule a name that is meaningful to you. For example, a schedule for Monday through Friday from 3:00pm to 9:00pm, might be called "After School". NOTE: Setup -> Time and Date must be set for schedule to work properly. More...							
Access Control List	ADD SCHEDULE RULE Rule Name: <input type="text"/> Days: <input type="checkbox"/> EveryDay <input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat All day(24Hour): <input type="checkbox"/> Time: From <input type="text"/> : <input type="text"/> To <input type="text"/> : <input type="text"/> (e.g. From 09:21 To 18:30)											
Port Triggering	<input type="button" value="Add Rules"/>											
Port Forwarding	RULES TABLE: <table border="1"> <thead> <tr> <th>Select</th> <th>Rule Name</th> <th>Days</th> <th>Time</th> </tr> </thead> <tbody> <tr> <td colspan="4"> </td> </tr> </tbody> </table> <input type="button" value="Delete Selected Rule"/>					Select	Rule Name	Days	Time			
Select	Rule Name	Days	Time									
DMZ												
Parent Control												
Filtering Options												
DOS Settings												
DNS												
Dynamic DNS												
Network Tools												
Routing												
NAT												

In the field **Rule Name**, give the schedule a name that is meaningful to you, such as "Weekday rule". Set the **Day(s)** and time field, and click **Add Rules** to save the new rule in the following Rules Table.

3.3.7 Filtering Options

Filters can be configured to manage your incoming and outgoing traffic.

3.3.7.1 IP/Port Filter

When you use the Port Triggering or Port Forwarding features to open specific ports to traffic from the Internet, you could be increasing the exposure of your LAN to cyberattacks from the Internet. In these cases, you can limit that exposure by specifying the IP addresses of Internet hosts that you trust to access your LAN through the ports that you have opened.

Choose **Advanced > Filtering Options > IP/Port Filter**. The **IP/Port Filtering** page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																	
Advanced Wireless	IP/PORT FILTERING Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.				Helpful Hints... Direction Upstream (Downstream) means packets outgoing (incoming) from (to) router. The Source IP addresses are LAN-side (WAN-side) addresses and the Destination IP addresses are WAN-side (LAN-side) addresses. Click the Apply Changes button to store a finished rule in the Rules List. More...																	
Access Control List	DEFAULT ACTION STATUS Outgoing Default Action: <input type="radio"/> Permit <input type="radio"/> Deny Incoming Default Action: <input type="radio"/> Permit <input checked="" type="radio"/> Deny																					
Port Triggering	RULE CONFIGURATION Rule Action: <input checked="" type="radio"/> Permit <input type="radio"/> Deny Protocol: <input type="text" value="IP"/> Direction: <input type="text" value="Upstream"/> Source IP Address: <input type="text"/> Mask Address: <input type="text" value="255.255.255.255"/> Dest IP Address: <input type="text"/> Mask Address: <input type="text" value="255.255.255.255"/> SPort: <input type="text"/> - <input type="text"/> DPort: <input type="text"/> - <input type="text"/> Enable: <input checked="" type="checkbox"/>																					
DMZ	<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/> <input type="button" value="Help"/>																					
Parent Control	CURRENT FILTER TABLE <table border="1"> <thead> <tr> <th>Rule</th> <th>Protocol</th> <th>Source IP/Mask</th> <th>SPort</th> <th>Dest IP/Mask</th> <th>DPort</th> <th>State</th> <th>Direction</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>					Rule	Protocol	Source IP/Mask	SPort	Dest IP/Mask	DPort	State	Direction	Action								
Rule	Protocol	Source IP/Mask	SPort	Dest IP/Mask	DPort	State	Direction	Action														
Filtering Options																						
DOS Settings																						
DNS																						
Dynamic DNS																						
Network Tools																						
Routing																						
NAT																						

Direction **Upstream** (**Downstream**) means packets outgoing (incoming) from (to) router. The Source IP addresses are LAN-side (WAN-side) addresses and the Destination IP addresses are WAN-side (LAN-side) addresses. Select the rule action, specify at least one of the following criteria: protocol, source/destination IP address, subnet mask and source/destination port.

Click the **Apply Changes** to save a finished rule in the Rules List. The **Current Filter Table** shows detailed information about each created IP filter.



Note:

The settings only apply when the firewall is enabled.

3.3.7.2 IPv6/Port Filter

Choose **Advanced > Filtering Options > IPv6/Port Filter**. The **IP/Port Filtering** page shown in the following figure appears. You may restrict certain types of ipv6 data packets between LAN-side and WAN-side.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP										
Advanced Wireless	<div>IP/PORT FILTERING</div> <p>Entries in this table are used to restrict certain types of ipv6 data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.</p> <div>DEFAULT ACTION STATUS</div> <p>Outgoing Default Action: <input type="radio"/> Permit <input type="radio"/> Deny</p> <p>Incoming Default Action: <input type="radio"/> Permit <input checked="" type="radio"/> Deny</p> <div>RULE CONFIGURATION</div> <p>Rule Action: <input checked="" type="radio"/> Permit <input type="radio"/> Deny</p> <p>Protocol: IPv6</p> <p>Direction: Upstream</p> <p>Source IPv6 Address: <input type="text"/></p> <p>Dest IPv6 Address: <input type="text"/></p> <p>SPort: <input type="text"/> - <input type="text"/></p> <p>Enable: <input checked="" type="checkbox"/></p> <p>Icmp6Type: PING6</p> <p>Prefix Length: <input type="text"/></p> <p>Prefix Length: <input type="text"/></p> <p>DPort: <input type="text"/> - <input type="text"/></p> <p>Apply Changes Reset Help</p> <div>CURRENT FILTER TABLE</div> <table border="1"> <thead> <tr> <th>Rule</th> <th>Protocol</th> <th>Source IPv6/Prefix</th> <th>SPort</th> <th>Dest IPv6/Prefix</th> <th>DPort</th> <th>ICMP6Type</th> <th>State</th> <th>Direction</th> <th>Action</th> </tr> </thead> </table>					Rule	Protocol	Source IPv6/Prefix	SPort	Dest IPv6/Prefix	DPort	ICMP6Type	State	Direction	Action
Rule						Protocol	Source IPv6/Prefix	SPort	Dest IPv6/Prefix	DPort	ICMP6Type	State	Direction	Action	
Access Control List															
Port Triggering															
Port Forwarding															
DMZ															
Parent Control															
Filtering Options															
DOS Settings															
DNS															
Dynamic DNS															
Network Tools															
Routing															
NAT															

For detailed configuration, you may refer to 3.3.7.1 IP/Port Filter.

3.3.7.3 MAC Filter

Choose **Advanced > Filtering Options > MAC Filter**. The **MAC Filtering** page shown in the following figure appears. You may create a list of MAC addresses that you would either like to allow or deny access to your network.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP								
Advanced Wireless	MAC FILTERING Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.				Helpful Hints... Create a list of MAC addresses that you would either like to allow or deny access to your network. More...								
Access Control List	DEFAULT POLICY Outgoing Default Policy: <input type="radio"/> Deny <input checked="" type="radio"/> Allow Incoming Default Policy: <input type="radio"/> Deny <input checked="" type="radio"/> Allow <input type="button" value="Apply Changes"/>												
Port Triggering	ADD FILTER Direction: <input type="button" value="Outgoing"/> Action: <input checked="" type="radio"/> Deny <input type="radio"/> Allow Source MAC: <input type="text"/> (ex. 00E086710502) Destination MAC: <input type="text"/> (ex. 00E086710502) <input type="button" value="Add"/>												
Port Forwarding	CURRENT MAC FILTER TABLE <table border="1"> <thead> <tr> <th>Select</th> <th>Direction</th> <th>Source MAC</th> <th>Destination MAC</th> </tr> </thead> <tbody> <tr> <td colspan="4"> <input type="button" value="Delete"/> <input type="button" value="Delete All"/> </td> </tr> </tbody> </table>					Select	Direction	Source MAC	Destination MAC	<input type="button" value="Delete"/> <input type="button" value="Delete All"/>			
Select	Direction	Source MAC	Destination MAC										
<input type="button" value="Delete"/> <input type="button" value="Delete All"/>													
DMZ													
Parent Control													
Filtering Options													
DOS Settings													
DNS													
Dynamic DNS													
Network Tools													
Routing													
NAT													

3.3.8 DoS Settings

Denial-of-Service Attack (DoS attack) is a type of attack on a network that is designed to bring the network to its knees by flooding it with useless traffic.

Choose **Advanced > DoS Settings**. The **DOS Settings** page shown in the following figure appears. Select the **Enable DoS Prevention** checkbox, select the options below, and click **Apply Changes** to finish.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	DOS SETTINGS A "denial-of-service" (DoS) attack is characterized by an explicit attempt by hackers to prevent legitimate users of a service from using that service.				Helpful Hints... If Enable DoS Prevention checkbox is selected, the router will detect some attacks. More...
Access Control List	DOS CONFIGURATION <input type="checkbox"/> Enable DoS Prevention <div> <input type="checkbox"/> Whole System Flood: SYN <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Whole System Flood: FBI <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Whole System Flood: UDP <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Whole System Flood: ICMP <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Per-Source IP Flood: SYN <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Per-Source IP Flood: FBI <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Per-Source IP Flood: UDP <input type="text" value="100"/> Packets/Second <input type="checkbox"/> Per-Source IP Flood: ICMP <input type="text" value="100"/> Packets/Second <input type="checkbox"/> TCP/UDP PortScan <input type="text" value="Low"/> Sensitivity <input type="checkbox"/> ICMP Smurf <input type="checkbox"/> IP Land <input type="checkbox"/> IP Spoof <input type="checkbox"/> IP TearDrop <input type="checkbox"/> PingOfDeath <input type="checkbox"/> TCP Scan <input type="checkbox"/> TCP SynWithData <input type="checkbox"/> UDP Bomb <input type="checkbox"/> UDP EchoChargen </div> <div> <input type="button" value="Select ALL"/> <input type="button" value="Clear ALL"/> </div> <input type="checkbox"/> Enable Source IP Blocking <input type="text" value="300"/> Block time (sec)				
Port Triggering	<input type="button" value="Apply Changes"/>				
Port Forwarding					
DMZ					
Parent Control					
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

3.3.9 DNS

Domain Name System (DNS) is an Internet service that translates the URL/domain name into the corresponding IP address. Since URL/Domain Names are alphabetical, they are easier to remember. But the Internet is based on IP address. For example, the URL/Domain Name www.dlink.com is actually 192.168.0.123.

3.3.9.1 DNS

Choose **Advanced > DNS > DNS**. The **DNS Configuration** page shown in the following figure appears. You may configure the ip addresses of DNS servers for DNS Relay.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless Access Control List Port Triggering Port Forwarding DMZ Parent Control Filtering Options DOS Settings DNS Dynamic DNS Network Tools Routing NAT	<div>DNS CONFIGURATION</div> <p>This page is used to configure the DNS server IP addresses for DNS Relay.</p> <div> <div>DNS CONFIGURATION</div> <div> <input checked="" type="radio"/> Attain DNS Automatically <input type="radio"/> Set DNS Manually </div> <div> DNS 1: <input type="text" value="0.0.0.0"/> DNS 2: <input type="text"/> DNS 3: <input type="text"/> </div> </div> <div> <input type="button" value="Apply Changes"/> <input type="button" value="Reset Selected"/> </div>				Helpful Hints... If Attain DNS Automatically is selected, this router will accept the first received DNS assignment from one of the PPPoA, PPPoE or MER/DHCP enabled PVC(s) during the connection establishment. If Set DNS Manually is selected, enter the DNS server IP addresses. Only do so if you are having problems with your DNS servers. More...

The following table describes the parameters and buttons of this page:

Field	Description
Attain DNS Automatically	Select it, the router accepts the first received DNS assignment from one of the PPPoA, PPPoE or MER enabled PVC(s) during the connection establishment.
Set DNS Manually	Select it, enter the IP addresses of the primary and secondary DNS server.
Apply Changes	Click it to save the settings of this page.
Reset Selected	Click it to start configuring the parameters in this page.

3.3.9.2 IPv6 DNS

Choose **Advanced > DNS > IPv6 DNS**. The **IPv6 DNS Configuration** page shown in the following figure appears. You may configure the ipv6 addresses of DNS servers.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	IPv6 DNS CONFIGURATION				
Access Control List	This page is used to configure the DNS server ipv6 addresses.				
Port Triggering	IPv6 DNS CONFIGURATION				
Port Forwarding	<input checked="" type="radio"/> Attain DNS Automatically <input type="radio"/> Set DNS Manually				
DMZ	DNS 1: <input type="text"/> Interface: <input type="text"/> DNS 2: <input type="text"/> Interface: <input type="text"/> DNS 3: <input type="text"/> Interface: <input type="text"/>				
Parent Control	<input type="button" value="Apply Changes"/> <input type="button" value="Reset Selected"/>				
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

The following table describes the parameters and buttons of this page.

Field	Description
Attain DNS Automatically	Select it, the router accepts the first received DNS assignment from one of the PPPoA, PPPoE or MER enabled PVC(s) during the connection establishment.
Set DNS Manually	Select it, enter the IP addresses and choose the WAN interface of the primary, the secondary and the tertiary DNS server.
Interface	The router accepts received packet assignment from one of the PPPoA, PPPoE or MER enabled PVC(s).
Apply Changes	Click it to save the settings of this page.
Reset Selected	Click it to start configuring the parameters in this page.

3.3.10 Dynamic DNS

The device supports dynamic domain name service (DDNS). The dynamic DNS service allows a dynamic public IP address to be associated with a static host name in any of the many domains, and allows access to a specified host from various locations on the Internet. Click a hyperlinked URL in the form of hostname.dyndns.org and allow remote access to a host. Many ISPs assign public IP addresses using DHCP, so locating a specific host on the LAN using the standard DNS is difficult. For example, if you are running a public web server or VPN server on your LAN, DDNS ensures that the host can be located from the Internet even if the public IP address changes. DDNS requires that an account

be set up with one of the supported DDNS service providers (DynDNS.org or dlinkddns.com).

Choose **Advanced > Dynamic DNS**. The **Dynamic DNS Configuration** page shown in the following page appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP					
Advanced Wireless	DYNAMIC DNS CONFIGURATION				Helpful Hints... DDNS - This stands for Dynamic DNS. By creating a static hostname, users will be able to point to this in order to access a dynamic IP address from anywhere in the world. To use this feature, you must first have a Dynamic DNS account from one of the providers in the drop down menu. Note: In some cases DDNS service requires you to open the WAN http service in ADVANCED -> Access Control List-> Access Control List . More...					
Access Control List	This page is used to configure the Dynamic DNS address from DynDNS.org or TZO. Here you can Add/Remove to configure Dynamic DNS.									
Port Triggering	DDNS CONFIGURATION									
Port Forwarding	DDNS provider: <input type="text" value="dlinkddns.com(Free)"/>									
DMZ	Hostname: <input type="text"/>									
Parent Control	Interface: <input type="text" value="ppoe1"/>									
Filtering Options	Enable: <input checked="" type="checkbox"/>									
DOS Settings	DynDns Settings:									
DNS	Username: <input type="text"/>									
Dynamic DNS	Password: <input type="text"/>									
Network Tools	TZO Settings:									
Routing	Email: <input type="text"/>									
NAT	Key: <input type="text"/>									
	<input type="button" value="Add"/> <input type="button" value="Remove"/>									
	DYNAMIC DDNS TABLE									
	<table border="1"> <thead> <tr> <th>Select</th> <th>State</th> <th>Service</th> <th>Hostname</th> <th>Username</th> <th>Interface</th> </tr> </thead> <tbody> </tbody> </table>				Select	State	Service	Hostname	Username	Interface
Select	State	Service	Hostname	Username	Interface					

The following table describes the parameters and buttons of this page.

Field	Description
DDNS provider	Select a dynamic DNS service provider from the pull-down list.
Hostname	Enter the host name that you registered with your DDNS service provider.
Username	Enter the username provided by your service provider.
Password	Enter the password provided by your service provider.



Note:

In some cases DDNS service requires you to open the WAN http service. Refer to Access Control List-> Access Control List.

Click **Add** to save the settings to the **Dynamic DDNS Table**.


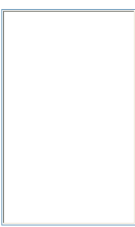

3.3.11 Network Tools

The router provides following tools: **Port Mapping**, **IGMP Proxy**, **IP QoS**, **UPnP**, **SNMP**, **TR-069**, **Software Forbidden**, **ARP Binding** and **Client Limit**.

3.3.11.1 Port Mapping

Port Mapping supports a single (LAN) port or multiple (LAN) ports to be formed as a group and mapped to a PVC (which is associated w/ a VLAN). As a result, each group of LAN ports will perform as an independent (logical) network (like a broadcast domain) among whom traffic broadcast would be prevented. This feature is useful while you would like to form multiple independent (logical) networks for multimedia applications at home. For instance, you can map PVC1 to port 1~3 to create a network (broadcast domain) for PCs for Internet, and map PVC2 to port 4 to create another network (broadcast domain) for IPTV service (devices). By using this feature (w/ multiple PVCs), data traffic and IPTV traffic would not affect each other.

Choose **Advanced** > **Network Tools** > **Port Mapping**. The **Port Mapping Configuration** page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																		
Advanced Wireless	PORT MAPPING CONFIGURATION To manipulate a mapping group: 1. Select a group from the table. 2. Select interfaces from the available/grouped interface list and add it to the grouped/available interface list using the arrow buttons to manipulate the required mapping of the ports. 3. Click "Apply Changes" button to save the changes. Note that the selected interfaces will be removed from their existing groups and added to the new group.				Helpful Hints... To use this feature, mapping groups should be created. If you need to remove an entry, then click on the Del button. More...																		
Access Control List	PORT MAPPING CONFIGURATION Port Mapping: <input checked="" type="radio"/> Disable <input type="radio"/> Enable <div> <div> WAN  </div> <div> Interface group  </div> <div> Add > </div> </div> <div> <div> LAN  </div> <div> < Del </div> </div>																						
Port Triggering	<table border="1"> <thead> <tr> <th>Select</th> <th>Interfaces</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>LAN1, LAN2, LAN3, LAN4, wlan, wlan-vap0, wlan-vap1, wlan-vap2, wlan-vap3, ppoe1</td> <td>Enabled</td> </tr> <tr> <td>Group1</td> <td></td> <td>--</td> </tr> <tr> <td>Group2</td> <td></td> <td>--</td> </tr> <tr> <td>Group3</td> <td></td> <td>--</td> </tr> <tr> <td>Group4</td> <td></td> <td>--</td> </tr> </tbody> </table>				Select	Interfaces	Status	Default	LAN1, LAN2, LAN3, LAN4, wlan, wlan-vap0, wlan-vap1, wlan-vap2, wlan-vap3, ppoe1	Enabled	Group1		--	Group2		--	Group3		--	Group4		--	
Select	Interfaces	Status																					
Default	LAN1, LAN2, LAN3, LAN4, wlan, wlan-vap0, wlan-vap1, wlan-vap2, wlan-vap3, ppoe1	Enabled																					
Group1		--																					
Group2		--																					
Group3		--																					
Group4		--																					
Port Forwarding	<div>Apply</div>																						
DMZ																							
Parent Control																							
Filtering Options																							
DOS Settings																							
DNS																							
Dynamic DNS																							
Network Tools																							
Routing																							
NAT																							

Follow the steps to manipulate a mapping group.

- Step 1** Select a group from the table.
- Step 2** Select interfaces from the available WAN and LAN interface groups and add it to the interface group list using the arrow buttons to manipulate the required mapping of the ports.
- Step 3** Click **Apply** button to save the changes.



Note:

The selected interfaces will be removed from their existing groups and added to the new group.

3.3.11.2 IGMP Proxy

IGMP allows support for efficient multicasting -- transmission of identical content, such as multimedia, from a source to a number of recipients. IGMP proxy enables the system to issue IGMP host messages on behalf of hosts that the system discovered through standard IGMP interfaces. The system acts as a proxy for its hosts when you enable it.

Choose **Advanced > Network Tools > IGMP Proxy**. The **IGMP Proxy Configuration** page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	IGMP PROXY CONFIGURATION				Helpful Hints... IGMP (Internet Group Management Protocol, join/leave) is a communications protocol used to manage the membership of Internet Protocol multicast groups. "IGMP proxy (multicast)" feature needs to be enabled for the device (L2 switch) to support multimedia applications (transmitter/media server & receivers/IPSTBs) w/ multicast capability, i.e. IPTV, on-line gaming etc. More...
Access Control List	IGMP proxy enables the system to issue IGMP host messages on behalf of hosts that the system discovered through standard IGMP interfaces. The system acts as a proxy for its hosts when you enable it by doing the follows: . Enable IGMP proxy on WAN interface (upstream), which connects to a router running IGMP. . Enable IGMP on LAN interface (downstream), which connects to its hosts.				
Port Triggering	IGMP PROXY CONFIGURATION				
Port Forwarding	IGMP Proxy: <input type="radio"/> Disable <input checked="" type="radio"/> Enable Multicast Allowed: <input type="radio"/> Disable <input checked="" type="radio"/> Enable Robust Count: <input type="text" value="2"/> Last Member Query Count: <input type="text" value="2"/> Query Interval: <input type="text" value="60"/> (seconds) Query Response Interval: <input type="text" value="100"/> (*100ms) Group Leave Delay: <input type="text" value="2000"/> (ms)				
DMZ	<input type="button" value="Apply Changes"/> <input type="button" value="Undo"/>				
Parent Control					
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

The following table describes the parameters and buttons of this page.

Field	Description
Multicast allowed	Enable multicast proxy, only for route mode.
Robust Count	Allows tuning for the expected packet loss on a link. It determines how many times a startup query should be xmitted.
Last Member Query Count	This parameter specifies the times the device sends the query message.

Field	Description
Query Interval	The device sends query messages to check IGMP user periodically. The unit is second.
Query Response Interval	The device waits for the IGMP user's reply. The unit is 100 * millisecond.
Group Leave Delay	The duration for the modem to cease forwarding multicast packets after a corresponding IGMP "Leave Group" message has been successfully offered to the modem.

Click **Apply Changes** to save the settings.

3.3.11.3 IP QoS

Quality of Service is a feature that allows you to allocate or guarantee the throughput or speed of Internet for certain computers. This is a very useful feature for sensitive applications such as VoIP whereby it will assist in preventing dropped calls. Large amounts of non-critical data can be scaled so that they do not affect sensitive real-time applications such as VoIP or Streaming.

Choose **Advanced > Network Tools > IP QoS**. The **IP QoS** page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																								
Advanced Wireless	IP QoS Entries in this table are used to assign the precedence for each incoming packet based on specified policy. Config Procedure: 1: set traffic rule. 2: assign the precedence or add marker for different stream.				Helpful Hints... QoS or Quality of service, allows your Router to help prioritise the data packets that flow throughout your network. This is a very useful feature for sensitive applications such as VoIP whereby it will assist in preventing dropped calls. Large amounts of non-critical data can be scaled so that they do not affect sensitive real-time applications such as VoIP or Streaming. The main screen shows some pre-configured rules that are used with common applications such as VoIP, FTP and messaging programs. More...																								
Access Control List	IP QoS CONFIGURATION IP QoS: <input type="radio"/> disable <input checked="" type="radio"/> enable <input type="button" value="Apply"/> QoS Policy: <input type="text" value="stream based"/> Schedule Mode: <input type="text" value="strict prior"/>																												
Port Triggering	QoS RULE LIST <table border="1"> <thead> <tr> <th colspan="6">Select</th> <th>IP Address</th> <th>MAC Address</th> </tr> <tr> <th>src IP</th> <th>src Port</th> <th>dest IP</th> <th>dest Port</th> <th>proto</th> <th>phy port</th> <th>priority</th> <th>DSCP</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>802.1p</td> <td>sel</td> </tr> </tbody> </table>					Select						IP Address	MAC Address	src IP	src Port	dest IP	dest Port	proto	phy port	priority	DSCP							802.1p	sel
Select						IP Address	MAC Address																						
src IP	src Port	dest IP	dest Port	proto	phy port	priority	DSCP																						
						802.1p	sel																						
Port Forwarding	<input type="button" value="add rule"/> <input type="button" value="delete"/> <input type="button" value="delete all"/>																												
DMZ																													
Parent Control																													
Filtering Options																													
DOS Settings																													
DNS																													
Dynamic DNS																													
Network Tools																													
Routing																													
NAT																													

- Step 1** Enable IP QoS and click **Apply** to enable IP QoS function.
- Step 2** Click **add rule** to add a new IP QoS rule. The page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																								
Advanced Wireless Access Control List Port Triggering Port Forwarding DMZ Parent Control Filtering Options DOS Settings DNS Dynamic DNS Network Tools Routing NAT	<div> IP QoS <p>Entries in this table are used to assign the precedence for each incoming packet based on specified policy. Config Procedure: 1: set traffic rule. 2: assign the precedence or add marker for different stream.</p> </div> <div> IP QoS CONFIGURATION <p>IP QoS: <input type="radio"/> disable <input checked="" type="radio"/> enable Apply</p> <p>QoS Policy: stream based</p> <p>Schedule Mode: strict prior</p> </div> <div> QoS RULE LIST <table border="1"> <thead> <tr> <th colspan="6">Select</th> <th>IP Address</th> <th>MAC Address</th> </tr> <tr> <th>src IP</th> <th>src Port</th> <th>dest IP</th> <th>dest Port</th> <th>proto</th> <th>phy port</th> <th>prior</th> <th>DSCP 802.1p sel</th> </tr> </thead> <tbody> <tr> <td colspan="8"> <div> add rule delete delete all </div> </td> </tr> </tbody> </table> </div> <div> ADD QoS RULE <p> Src IP: <input type="text"/> Src Mask: <input type="text"/> Dest IP: <input type="text"/> Dest Mask: <input type="text"/> Src Port: <input type="text"/> Dest Port: <input type="text"/> Protocol: Phy Port: set priority: p3(Lowest) <input checked="" type="checkbox"/> insert or modify QoS mark DSCP: <input type="text"/> (0-63) 802.1p: add rule </p> </div>				Select						IP Address	MAC Address	src IP	src Port	dest IP	dest Port	proto	phy port	prior	DSCP 802.1p sel	<div> add rule delete delete all </div>								Helpful Hints... <p>QoS or Quality of service allows your Router to help prioritise the data packets that flow throughout your network. This is a very useful feature for sensitive applications such as VoIP whereby it will assist in preventing dropped calls. Large amounts of non-critical data can be scaled so that they do not affect sensitive real-time applications such as VoIP or Streaming. The main screen shows some pre-configured rules that are used with common applications such as VoIP, FTP and messaging programs.</p> <p>More...</p>
Select						IP Address	MAC Address																						
src IP	src Port	dest IP	dest Port	proto	phy port	prior	DSCP 802.1p sel																						
<div> add rule delete delete all </div>																													

The following table describes the parameters and buttons of this page.

Field	Description
QoS Policy	You can choose stream based , 802.1p based , or DSCP based .
Schedule Mode	You can choose strict prior or WFQ (4:3:2:1) .
Source IP	The IP address of the source data packet.
Source Mask	The subnet mask of the source IP address.
Destination IP	The IP address of the destination data packet.
Destination Mask	The subnet mask of the destination IP address.
Source Port	The port of the source data packet.
Destination Port	The port of the destination data packet.
Protocol	The protocol responding to the IP QoS rules. You can choose TCP , UDP , or ICMP .
Phy Port	The LAN interface responding to the IP QoS rules.
Set priority	The priority of the IP QoS rules. P0 is the highest priority and P3 is the lowest.
802.1p	You can choose from 0 to 7 .
Delete	Select a row in the QoS rule list and click it to delete the row.
Delete all	Select all the rows in the QoS rule list and click it to delete the rows.

Click **add rule** to add it to the **QoS Rule List**.

3.3.11.4 UpnP

UPnP (Universal Plug and Play) is a networking architecture that provides compatibility among networking equipment, software, and peripherals. This router has optional UPnP capability, and can work with other UPnP devices and software. The system acts as a daemon when you enable UPnP. Leave the UPnP option enabled as long as the LAN has other UPnP applications.

Choose **Advanced > Network Tools > UPnP**. The **UPnP Configuration** page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	UPNP CONFIGURATION This page is used to configure UPnP. The system acts as a daemon when you enable UPnP.				Helpful Hints... UPnP helps other UPnP LAN hosts interoperate with the router. Leave the UPnP option enabled as long as the LAN has other UPnP applications. More...
Access Control List	UPNP CONFIGURATION UPnP: <input type="radio"/> Disable <input checked="" type="radio"/> Enable WAN Interface: <input type="text" value="v"/>				
Port Triggering	<input type="button" value="Apply Changes"/>				
Port Forwarding					
DMZ					
Parent Control					
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

3.3.11.5 SNMP

SNMP (Simple Network Management Protocol) provides a means to monitor status and performance and set configuration parameters. It enables a management station to configure, monitor and receive trap messages from network devices.

Choose **Advanced > Network Tools > SNMP**. The **SNMP Protocol Configuration** page shown in the following figure appears. You may change the settings for system description, trap ip address and community name.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	SNMP PROTOCOL CONFIGURATION This page is used to configure the SNMP protocol. Here you may change the setting for system description, trap ip address, community name, etc..				Helpful Hints... Provides a means to monitor status and performance as well as set configuration parameters. More...
Access Control List	SNMP PROTOCOL CONFIGURATION <input checked="" type="checkbox"/> Enable SNMP System Description ADSL SoHo Router System Contact <input type="text"/> System Name <input type="text" value="ADSL"/> System Location <input type="text"/> Trap IP Address <input type="text"/> Community name (read-only) <input type="text" value="public"/> Community name (read-write) <input type="text" value="public"/>				
Port Triggering	<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>				
Port Forwarding					
DMZ					
Parent Control					
Filtering Options					
DOS Settings					
DNS					
Dynamic DNS					
Network Tools					
Routing					
NAT					

The following table describes the parameters of this page:

Field	Description
Enable SNMP	Select it to enable SNMP function. You need to enable SNMP, and then you can configure the parameters of this page.
Trap IP Address	Enter the trap IP address. The trap information is sent to the corresponding host.
Community Name (Read-only)	The network administrators must use this password to read the information of this router.
Community Name (Read-Write)	The network administrators must use this password to configure the information of the router.

3.3.11.6 TR-069

TR-069 is a WAN management protocol. It is a bidirectional SOAP/HTTP based protocol providing the communication between the ADSL router and an Auto Configuration Server (ACS) to monitor status and performance and to set configuration parameters from WAN side.

Choose **Advanced > Network Tools > TR-069**. The **TR-069 Configuration** page shown in the following figure appears. You may change the setting for the ACS's parameters.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	TR-069 CONFIGURATION				Helpful Hints... Provides a means to monitor status and performance as well as set configuration parameters from WAN side. More...
Access Control List	This page is used to configure the TR-069 CPE. Here you may change the setting for the ACS's parameters.				
Port Triggering					
Port Forwarding					
DMZ					
Parent Control	ACS CONFIGURATION				
Filtering Options	Enable: <input checked="" type="checkbox"/> URL: <input type="text" value="http://172.21.70.44/cpe/7pd12"/> User Name: <input type="text" value="rtk"/> Password: <input type="text" value="rtk"/> Periodic Inform Enable: <input type="radio"/> Disable <input checked="" type="radio"/> Enable Periodic Inform Interval: <input type="text" value="300"/> seconds				
DOS Settings	CONNECTION REQUEST				
DNS	User Name: <input type="text" value="rtk"/> Password: <input type="text" value="rtk"/> Path: <input type="text" value="/tr069"/> Port: <input type="text" value="7547"/>				
Dynamic DNS	DEBUG				
Network Tools	ACS Certificates CPE: <input checked="" type="radio"/> No <input type="radio"/> Yes Show Message: <input checked="" type="radio"/> Disable <input type="radio"/> Enable CPE Sends GetRPC: <input checked="" type="radio"/> Disable <input type="radio"/> Enable Skip MReboot: <input checked="" type="radio"/> Disable <input type="radio"/> Enable Delay: <input type="radio"/> Disable <input checked="" type="radio"/> Enable Auto-Execution: <input type="radio"/> Disable <input checked="" type="radio"/> Enable CT Inform Extension: <input checked="" type="radio"/> Disable <input type="radio"/> Enable				
Routing	<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>				
NAT	CERTIFICATE MANAGEMENT				
	CPE Certificate Password: <input type="text" value="client"/> <input type="button" value="Apply"/> <input type="button" value="Undo"/> <input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/> CPE Certificate: <input type="button" value="Delete"/> <input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/> CA Certificate: <input type="button" value="Delete"/>				

The following table describes the parameters of this page:

Field	Description
ACS Configuration	
URL	The URL of the auto-configuration server to connect to.
User Name	The user name for logging in to the ACS.

Field	Description
Password	The password for logging in to the ACS.
Periodic Inform Enable	Select Enable to periodically connect to the ACS to check configuration updates.
Periodic Inform Interval	Specify the amount of time between connections to ACS.
Connection Request	
User Name	The connection username provided by TR-069 service.
Password	The connection password provided by TR-069 service.
Debug	
Show Message	Select Enable to display ACS SOAP messages on the serial console.
CPE sends GetRPC	Select Enable , the router contacts the ACS to obtain configuration updates.
Skip MReboot	Specify whether to send an MReboot event code in the inform message.
Delay	Specify whether to start the TR-069 program after a short delay.
Auto-Execution	Specify whether to automatically start the TR-069 after the router is powered on.
CT Inform Extension	Specify support China Telecom extension inform type or not.
Certificate Management	
CPE Certificate Password	The certificate password of the router.
CPE Certificate	Enter the CPE Certificate file. Click it to browse and upload the certificate for the router.
CA Certificate	Click it to browse and upload the CA certificate for the router.

3.3.11.7 Software Forbidden

Choose **Advanced > Network Tools > Software Forbidden**. The **Software Forbidden** page shown in the following figure appears. You may config some software to be forbidden to deny the ip packets of it.

To forbid one specified PC (or some PCs) from using an application, select the application you want to prohibit, and input a single IP address or IP addresses in range. When Single IP is selected, IP 0.0.0.0 represent for any IP. In this situation, all PCs connected to this router will deny the selected software.

SOFTWARE FORBIDDEN

This page is used to config some softwares to be forbidden. By it, you can deny the ip packets from the specified software.

CURRENT FORBIDDEN SOFTWARE LIST

Software	IP Address	Select
<input type="button" value="Delete"/> <input type="button" value="Delete All"/>		

ADD FORBIDDEN SOFTWARE

Add Forbidden Software:

Source IP: ☒ Single IP ☐ IP Range

IP Start: (The IP 0.0.0.0 represent any IP)

IP End:

Helpful Hints...

When Single IP is selected, IP 0.0.0.0 represent for any IP in this situation, all PCs connected to this router will deny the selected software.

[More...](#)

The following table describes the parameters and buttons of this page:

Field	Description
Current Forbidden Software List	A list of currently forbidden applications for accessing the network.
Add Forbidden Software	Select an application to be forbidden from accessing the network.

3.3.11.8 ARP Binding

This function realizes the binding of IP addresses and MAC addresses to avoid ARP address cheats. Choose **Advanced > Network Tools > ARP Binding**. The **ARP Binding Configuration** page shown in the following figure appears.


DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP			
Advanced Wireless	ARP BINDING CONFIGURATION							
Access Control List	This page lists the permanent arp entry table. You can bind ip with corresponding mac to avoid arp spoof.							
Port Triggering	ARP BINDING CONFIGURATION							
Port Forwarding	<p>IP Address: <input type="text" value="0.0.0.0"/></p> <p>Mac Address: <input type="text" value="000000000000"/> (ex. 00E096710502)</p>							
DMZ	<input type="button" value="Add"/> <input type="button" value="Delete Selected"/> <input type="button" value="Undo"/>							
Parent Control	ARP BINDING TABLE							
Filtering Options	<table border="1"> <thead> <tr> <th>Select</th> <th>IP Address</th> <th>MAC Address</th> </tr> </thead> <tbody> </tbody> </table>					Select	IP Address	MAC Address
Select	IP Address	MAC Address						
DOS Settings								
DNS								
Dynamic DNS								
Network Tools								
Routing								
NAT								

The following table describes the parameters and buttons of this page:

Field	Description
IP Address	An IP address to be bound.
Mac Address	An MAC address to be bound.
Add	Click this icon to add an ARP binding.
Delete Selected	Delete a selected setting from the list.
Undo	Reconfigure the above setting.
ARP Binding Table	A list of all the current ARP binding settings.

3.3.11.9 Client Limit

Choose **Advanced > Network Tools > Client Limit**. The **Client Limit Configuration** page shown in the following figure appears. You may configure the capability of forcing how many devices can access to the Internet.

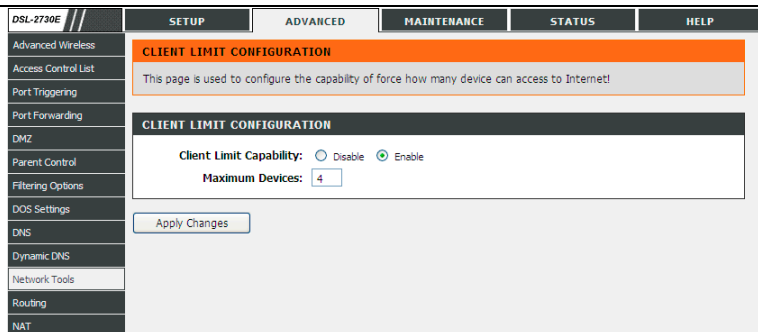


3.3.12 Routing

Under this menu, static route, default gateway and RIP type routing configurations can be performed.

3.3.12.1 Static Route

Choose **Advanced** > **Routing** > **Static Route**. The **Routing Configuration** page shown in the following figure appears. This page is used to configure the routing information. You may add or delete IP routes.

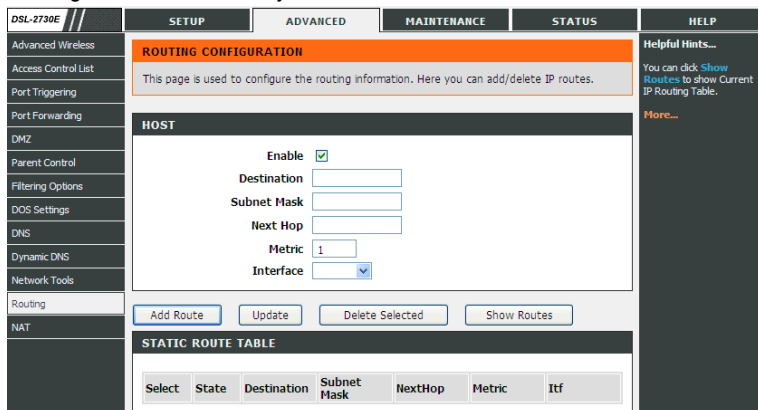

The following table describes the parameters and buttons of this page:

Field	Description
Enable	Select it to use static IP routes.
Destination	Enter the IP address of the destination device.
Subnet Mask	Enter the subnet mask of the destination device.
Next Hop	Enter the IP address of the next hop in the IP route to the destination device.
Metric	The metric cost for the destination.
Interface	The interface for the specified route.
Add Route	Click it to add the new static route to the Static Route Table .
Update	Select a row in the Static Route Table and modify the parameters. Then click it to save the settings temporarily.
Delete Selected	Select a row in the Static Route Table and click it to delete the row.
Show Routes	Click it, the IP Route Table appears. You can view a list of destination routes commonly accessed by your network.
Static Route Table	A list of the previously configured static IP routes.

Click **Show Routes**, the page shown in the following figure appears. The table shows a list of destination routes commonly accessed by your network.

IP ROUTE TABLE			
This table shows a list of destination routes commonly accessed by your network.			
CURRENT IP ROUTING TABLE			
Destination	Subnet Mask	NextHop	Interface
192.168.1.1	255.255.255.255	*	e1
<div>Refresh</div> <div>Close</div>			

3.3.12.2 IPv6 Static Route

Choose **Advanced > Routing > IPv6 Static Route**. The **IPv6 Routing Configuration** page shown in the following figure appears. This page is used to configure the routing information. You can add or delete IP routes.

The screenshot shows the 'IPv6 ROUTING CONFIGURATION' page. The left sidebar contains links: DSL-2730E, Advanced Wireless, Access Control List, Port Triggering, Port Forwarding, DMZ, Parent Control, Filtering Options, DOS Settings, DNS, Dynamic DNS, Network Tools, Routing (selected), and NAT. The main area has tabs: SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The 'ADVANCED' tab is active, displaying the 'IPv6 ROUTING CONFIGURATION' section with a message: 'This page is used to configure the ipv6 routing information. Here you can add/delete IPv6 routes.' Below this is the 'CONFIGURATION' section with fields for Destination, Prefix Length, Next Hop, and Interface. There are 'Add Route' and 'Delete Selected' buttons. At the bottom is the 'IPv6 STATIC ROUTE TABLE' with columns: Select, Destination, NextHop, and Interface.

The following table describes the parameters and buttons of this page.

Field	Description
Destination	Enter the IPv6 address of the destination device.
Prefix Length	Enter the prefix length of the IPv6 address.
Next Hop	Enter the IP address of the next hop in the IPv6 route to the destination address.
Interface	The interface for the specified route.
Add Route	Click it to add the new static route to the IPv6 Static Route Table .
Delete Selected	Select a row in the IPv6 Static Route Table and click it to delete the row.

3.3.12.3 RIP

Enable this function if you are using this device as a RIP-enabled router to communicate with others using Routing Information Protocol (RIP). This page is used to select the interfaces on your devices that use RIP, and the version of the protocol used.

Choose **Advanced** > **Routing** > **IPv6 Static Route**. The **IPv6 Routing Configuration** page shown in the following figure appears.

DSL-2730E

SETUP **ADVANCED** **MAINTENANCE** **STATUS** **HELP**

Advanced Wireless
Access Control List
Port Triggering
Port Forwarding
DMZ
Parent Control
Filtering Options
DOS Settings
DNS
Dynamic DNS
Network Tools
Routing
NAT

RIP CONFIGURATION

Enable the RIP if you are using this device as a RIP-enabled router to communicate with others using the Routing Information Protocol.
attention: if you want to enable RIP, please make sure remote control is enabled.

RIP

☒ Off ☐ On

interface

Recv Version

Send Version

RIP CONFIG LIST

Select	interface	Recv Version	Send Version
--------	-----------	--------------	--------------

Helpful Hints...
Enabling RIP provides a protocol that determines the best path to a target by estimating the distance in number of hops or intermediate routers.
[More...](#)

The following table describes the parameters and buttons of this page:

Field	Description
RIP	Select Enable , the router communicates with other RIP-enabled devices.
Apply	Click it to save the settings of this page.
Interface	Choose the router interface that uses RIP.
Receive Version	Choose the interface version that receives RIP messages. You can choose RIP1 , RIP2 , or Both . <ul style="list-style-type: none"> Choose RIP1 indicates the router receives RIP v1 messages. Choose RIP2 indicates the router receives RIP v2 messages. Choose Both indicates the router receives RIP v1 and RIP v2 messages.
Send Version	The working mode for sending RIP messages. You can choose RIP1 or RIP2 . <ul style="list-style-type: none"> Choose RIP1 indicates the router broadcasts RIP1 messages only. Choose RIP2 indicates the router multicasts RIP2 messages only.

Field	Description
Add	Click it to add the RIP interface to the Rip Config List .
Delete	Select a row in the Rip Config List and click it to delete the row.

3.3.13 NAT

Under this menu, NAT ALG (Application Layer Gateway), NAT Exclude IP, NAT Forwarding, FTP ALG Config and NAT IP Mapping can be performed.

3.3.13.1 NAT ALG

Choose **Advanced > NAT > NAT ALG**. The **NAT ALG and Pass-Through** page shown in the following figure appears. Choose the NAT ALG and Pass-Through options, and then click **Apply Changes**.

The screenshot shows the web interface for the DSL-2730E router. On the left is a sidebar menu with options like Advanced Wireless, Access Control List, Port Triggering, Port Forwarding, DMZ, Parent Control, Filtering Options, DOS Settings, DNS, Dynamic DNS, Network Tools, Routing, and NAT. The main content area has tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The 'ADVANCED' tab is selected, and within it, the 'NAT ALG AND PASS-THROUGH' sub-tab is active. Below the sub-tab is a description: 'Setup NAT ALG and Pass-Through configuration'. The main configuration area is titled 'RIP CONFIG LIST' and contains a list of protocols with checkboxes for enabling them: IPsec Pass-Through, LZTP Pass-Through, PPTP Pass-Through, FTP, H.323, SIP, RTSP, ICQ, and MSN. All checkboxes are currently checked. At the bottom of the configuration area are two buttons: 'Apply Changes' and 'Reset'.

3.3.13.2 NAT Exclude IP

Choose **Advanced > NAT > NAT Exclude IP**. The **NAT EXCLUDE IP** page shown in the following figure appears. In the page, you can configure some source IP addresses which use the purge route mode when accessing the Internet through the specified interface.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP								
Advanced Wireless	NAT EXCLUDE IP												
Access Control List	In the page ,you can config some source ip address which use the purge route mode when access internet through the specified interface.												
Port Triggering													
Port Forwarding													
DMZ	CONFIG												
Parent Control	interface <input type="text" value="pppoe1"/>												
Filtering Options	IP Range <input type="text"/> - <input type="text"/>												
DOS Settings	<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>												
DNS													
Dynamic DNS													
Network Tools	CURRENT NAT EXCLUDE IP TABLE												
Routing													
NAT	<table border="1"> <thead> <tr> <th>WAN Interface</th> <th>Low IP</th> <th>High IP</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>					WAN Interface	Low IP	High IP	Action				
WAN Interface	Low IP	High IP	Action										

3.3.13.3 NAT Forwarding

Choose **Advanced > NAT > NAT Forwarding**. The **NAT Forwarding** page shown in the following figure appears.

Entries in this table allow you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.

Under 1483MER or 1483Routed mode, if NAPT (Network Address Port Translation) is enabled, the **Local IP Address** is configured as 192.168.1.3 and the **Remote IP Address** is configured as 202.32.0.2, the PC with the LAN IP 192.168.1.3 will use 202.32.0.2 when it is connected to the Internet via the router without NAPT control.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP								
Advanced Wireless	NAT FORWARDING												
Access Control List	<p>Entries in this table allow you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.</p>												
Port Forwarding	SETTING												
DMZ	<p>Local IP Address <input type="text"/></p> <p>Remote IP Address <input type="text"/></p> <p>Enable <input checked="" type="checkbox"/></p>												
Parent Control	<p><input type="button" value="Apply Changes"/> <input type="button" value="Reset"/></p>												
Filtering Options	CURRENT NAT PORT FORWARDING TABLE												
DOS Settings	<table border="1"> <thead> <tr> <th>Local IP Address</th> <th>Remote IP Address</th> <th>State</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>					Local IP Address	Remote IP Address	State	Action				
Local IP Address	Remote IP Address	State	Action										
DNS													
Dynamic DNS													
Network Tools													
Routing													
NAT													

The following table describes the parameters and buttons of this page:

Field	Description
Local IP Address	Input a local IP address.
Remote IP Address	Input a remote IP address
Enable	Enable the current configured rule.
Apply Changes	Submit the configurations.
Reset	Cancel the modification and reconfigure the settings.
Current NAT Port Forwarding Table	Current configuration rule list.

3.3.13.4FTP ALG Config

The common port for FTP connection is port 21, and a common ALG monitors the TCP port 21 to ensure NAT pass-through of FTP. By enabling this function, when the FTP server connection port is not a port 21, the FTP ALG module will be informed to monitor other TCP ports to ensure NAT pass-through of FTP. Choose **Advanced > NAT > FTP ALG Config**. The **FTP ALG Configuration** page shown in the following figure appears.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP				
Advanced Wireless	FTP ALG CONFIGURATION								
Access Control List	This page is used to configure FTP Server ALG and FTP Client ALG ports .								
Port Triggering	SETTING PORT								
Port Forwarding	FTP ALG port <input type="text"/>								
DMZ	<input type="button" value="Add Dest Ports"/> <input type="button" value="Delete Selected DestPort"/>								
Parent Control	FTP ALG PORTS TABLE								
Filtering Options	<table border="1"> <thead> <tr> <th>Select</th> <th>Ports</th> </tr> </thead> <tbody> <tr> <td><input type="radio"/></td> <td>21</td> </tr> </tbody> </table>					Select	Ports	<input type="radio"/>	21
Select	Ports								
<input type="radio"/>	21								
DOS Settings									
DNS									
Dynamic DNS									
Network Tools									
Routing									
NAT									

The following table describes the parameters and buttons of this page:

Field	Description
FTP ALG port	Set an FTP ALG port.
Add Dest Ports	Add a port configuration.
Delete Selected DestPort	Delete a selected port configuration from the list.

3.3.13.5 NAT IP Mapping

Choose **Advanced > NAT > NAT IP Mapping**. The **NAT IP Mapping** page shown in the following figure appears.

Entries in the **Current NAT IP Mapping Table** allow you to configure one IP pool for a specified source IP address from LAN, so one packet whose source IP is in range of the specified address will select one IP address from the pool for NAT.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP									
Advanced Wireless Access Control List Port Triggering Port Forwarding DMZ Parent Control Filtering Options DOS Settings DNS Dynamic DNS Network Tools Routing NAT	<h3>NAT IP MAPPING</h3> <p>Entries in this table allow you to config one IP pool for specified source ip address from lan, so one packet which's source ip is in range of the specified address will select one IP address from pool for NAT.</p> <hr/> <h4>SETTING</h4> <p>Type: <input type="text" value="One-to-One"/></p> <p>Local Start IP: <input type="text"/></p> <p>Local End IP: <input type="text"/></p> <p>Global Start IP: <input type="text"/></p> <p>Global End IP: <input type="text"/></p> <p><input type="button" value="Apply Changes"/> <input type="button" value="Reset"/></p> <hr/> <h4>CURRENT NAT IP MAPPING TABLE</h4> <table border="1"> <thead> <tr> <th>Local Start IP</th> <th>Local End IP</th> <th>Global Start IP</th> <th>Global End IP</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td colspan="5"> <input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/> </td> </tr> </tbody> </table>			Local Start IP	Local End IP	Global Start IP	Global End IP	Action	<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>					Helpful Hints... <p>NAT IP Mapping are used for advanced network address translation.</p> <p>More...</p>
Local Start IP	Local End IP	Global Start IP	Global End IP	Action										
<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>														

3.4 Maintenance

3.4.1 System

Choose **Maintenance > System**. The page shown in the following figure appears. In this page you can reboot your router or save your router configuration to a file on your computer in case you have to reset your router to factory default settings. You can restore your router settings from a previously saved configuration file. You may also reset your router to factory default settings. Resetting your router to factory default settings will delete your current configuration.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
System	COMMIT/REBOOT Click the button below to reboot the router or reset it to factory default settings. <div> <input type="button" value="Reset to default"/> <input type="button" value="Save and reboot"/> </div>				Helpful Hints... This page allows you to reboot your router or save your router configuration to a file on your computer as a precaution in case you have to reset your router to factory default settings. You will be able to restore your router settings from a previously saved configuration file. There is also a function to allow you to reset your router to factory default settings. Resetting your router to factory default settings will delete your current configuration. More...
Firmware Update	BACKUP SETTINGS Back up DSL Router configurations. You may save your router configurations to a file on your PC. <i>Note: Please always save configuration file first before viewing it.</i> <div> <input type="button" value="Back Settings"/> </div>				
Password	UPDATE SETTINGS Update DSL Router settings. You may update your router settings using your saved files. Settings File Name : <input type="text"/> <input type="button" value="Browse"/> <div> <input type="button" value="Update Settings"/> </div>				
Diagnostics					
System Log					
Logout					

The following table describes the parameters and buttons of this page:

Field	Description
Reset to default	This option restores all configuration settings back to the settings that were in effect at the time the router was shipped from the factory. All settings will be lost. If you want to save your router configuration settings, use the Backup Settings option below.
Save and reboot	This will save all your settings and restart the router.
Back settings	Save your configurations in a file on your computer so that it may be accessed again later if your current settings are changed. Be sure to save the configuration before performing a firmware update.
Update settings	Click Browse to select the configuration file of device and click Update Settings to begin restoring the device configuration.



Note:

Do not turn off your device or press the **Reset** button while an operation in this page is in progress.

3.4.2 Firmware Update

Choose **Maintenance > Firmware Update**. The page shown in the following figure appears. This page displays your device firmware version and information that will be helpful for D-Link technicians should you require any technical support.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
System	<div> UPGRADE FIRMWARE <p>Step 1: Obtain an updated firmware image file from your ISP.</p> <p>Step 2: Enter the path to the image file location in the box below or click the "Browse" button to locate the image file.</p> <p>Step 3: Click the "Update Firmware" button once to upload the new image file.</p> <p>NOTE: The update process takes about 2 minutes to complete, and your DSL Router will reboot. Please DO NOT power off your router before the update is complete.</p> </div> <div> SELECT FILE <p>Current Firmware Version: SEA_1.00 Current Firmware Date: Jan 17 2013 15:11:22</p> <p>Firmware File Name: <input type="text"/> <input type="button" value="Browse..."/></p> <p><input type="button" value="Update Firmware"/> <input type="button" value="Reset"/></p> </div>				Helpful Hints... <p>Please Note: This page displays your device firmware version and information that will be helpful for D-Link technicians should you require any technical support.</p> <p>If your router is working without issue, there should be no need to update your firmware. This information is just for your reference as it is often unnecessary to upload new firmware to your router.</p> <p>More...</p>
Firmware Update					
Password					
Diagnostics					
System Log					
Logout					

The procedure for updating the firmware is as follows.

- Step 1** Click **Browse...** to search the file.
- Step 2** Click **Update Firmware** to update the configuration file.
- Step 3** Wait for the router to reboot. This can take another minute or more.



Note:

Some firmware updates reset the configuration options to the factory defaults. Before performing an update, be sure to save the current configuration. Refer to 3.4.1 System.

3.4.3 Password

Choose **Maintenance > Password**. The page shown in the following figure appears. You may modify your router password needed to access this Web management interface. For security reasons, it is recommended that you change the default admin and user passwords of the router. The password you choose should be between 1 and 16 characters in length. If you forget your device

password, the only solution is to reset your router to factory default settings and you will lose all your device configuration settings.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP							
System	USER ACCOUNT CONFIGURATION				Helpful Hints... This page allows you to modify your router password needed to access this Web management interface. For security reasons, it is recommended that you change your device's admin and user passwords from the factory default. The password you choose should be between 1 and 16 characters in length. Please make sure to choose a password you can remember or write it down and keep in a safe and separate location for future reference. If you forget your device password, the only solution is to reset your router to factory default settings and you will lose all your device configuration settings. More...							
Firmware Update	This page is used to add user account to access the web server of ADSL Router. Empty user name or password is not allowed.											
Password												
Diagnostics												
System Log												
Logout	CONFIGURATION User Name: <input type="text"/> Old Password: <input type="text"/> New Password: <input type="text"/> Confirm Password: <input type="text"/> Idle logout time: <input type="text"/> (1-60min)											
	<input type="button" value="Add"/> <input type="button" value="Modify"/> <input type="button" value="Delete"/> <input type="button" value="Reset"/>											
	USER ACCOUNT TABLE <table border="1"> <thead> <tr> <th>Select</th> <th>User Name</th> <th>Privilege</th> <th>Idle Time</th> </tr> </thead> <tbody> <tr> <td><input type="radio"/></td> <td>admin</td> <td>root</td> <td>5</td> </tr> </tbody> </table>				Select	User Name	Privilege	Idle Time	<input type="radio"/>	admin	root	5
Select	User Name	Privilege	Idle Time									
<input type="radio"/>	admin	root	5									

The following table describes the parameters and buttons of this page:

Field	Description
Root	The root account is fixed, having full access to the Web-based management interface.
User	The user account has the privilege to view configuration settings and statistics and update the router's firmware.

3.4.4 Diagnostics

Choose **Maintenance > Diagnostics**. The page shown in the following figure appears. Your router is capable of testing your DSL connection. If a test displays a fail status, click "Rerun Diagnostic Tests" at the bottom of this page to make sure the fail status is consistent.

3.4.4.1 Ping Diagnostic

Choose **Maintenance > Diagnostics > Ping**. The page shown in the following figure appears. This page allows you to ping a Host to test whether your router can be connected to the network.

DSL-2730E //	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
System	PING DIAGNOSTIC				Helpful Hints... This page allows you to ping a host to test whether your router can connect to network. More...
Firmware Update	This page is used to ping.				
Password					
Diagnostics	HOST				
System Log	<input type="text"/> <input type="button" value="PING"/>				
Logout					

The following table describes the parameter and button of this page:

Field	Description
Host	Enter the valid IP address or domain name.
Ping	Click it to start to Ping.

3.4.4.2 Ping6

Choose **Maintenance > Diagnostics > Ping6**. The page shown in the following figure appears. The target Address can be a domain or IPv6 address.

DSL-2730E //	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
System	PING6 DIAGNOSTIC				
Firmware Update	Ping6 Diagnostic				
Password					
Diagnostics	Target Address: <input type="text"/> Interface: <input type="button" value="v"/>				
System Log					
Logout	<input type="button" value="PING"/>				

The following table describes the parameter and button of this page:

Field	Description
Target Address	Enter an IP address for Ping6 diagnosis.
Interface name	Enter an interface through which the Ping6 diagnosis is performed.

3.4.4.3 Traceroute

Choose **Maintenance > Diagnostics > Traceroute**. The page shown in the following figure appears. You can track the route path through the information which is from your computer to the other side host on the Internet.

DSL-2730E

System
Firmware Update
Password
Diagnostics
System Log
Logout

SETUP ADVANCED MAINTENANCE STATUS HELP

TRACEROUTE DIAGNOSTIC

This page is used to traceroute diagnostic.

TRACEROUTE

Host

NumberOfTries

Timeout ms

Datasize Bytes

DSCP

MaxHopCount

Interface

traceroute Show Result

The following table describes the parameters and buttons of this page.

Field	Description
Host	Enter the destination host address for diagnosis.
NumberOfTries	Number of repetitions.
Timeout	Put in the timeout value.
Datasize	Packet size.
DSCP	Differentiated Services Code Point, You should set a value between 0-63.
MaxHopCount	Maximum number of routes.
Interface	Select the interface.
Traceroute	Click start traceroute.

3.4.4.4 ADSL

Choose **Maintenance > Diagnostics > ADSL**. The page shown in the following figure appears. It is used for ADSL tone diagnostics.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																																				
System	DIAGNOSTIC ADSL																																								
Firmware Update	This page is used to diagnostic ADSL.																																								
Password	ADSL TONE DIAGNOSTIC																																								
Diagnostics	<input type="button" value="Start"/>																																								
System Log	<table border="1"> <thead> <tr> <th></th> <th>Downstream</th> <th>Upstream</th> </tr> </thead> <tbody> <tr> <td>Hlin Scale</td> <td></td> <td></td> </tr> <tr> <td>Loop Attenuation(dB)</td> <td></td> <td></td> </tr> <tr> <td>Signal Attenuation(dB)</td> <td></td> <td></td> </tr> <tr> <td>SNR Margin(dB)</td> <td></td> <td></td> </tr> <tr> <td>Attainable Rate(Kbps)</td> <td></td> <td></td> </tr> <tr> <td>Output Power(dBm)</td> <td></td> <td></td> </tr> </tbody> </table>						Downstream	Upstream	Hlin Scale			Loop Attenuation(dB)			Signal Attenuation(dB)			SNR Margin(dB)			Attainable Rate(Kbps)			Output Power(dBm)																	
	Downstream	Upstream																																							
Hlin Scale																																									
Loop Attenuation(dB)																																									
Signal Attenuation(dB)																																									
SNR Margin(dB)																																									
Attainable Rate(Kbps)																																									
Output Power(dBm)																																									
Logout	ADSL TONE LIST																																								
	<table border="1"> <thead> <tr> <th>Tone Number</th> <th>H.Real</th> <th>H.Image</th> <th>SNR</th> <th>QLN</th> <th>Hlog</th> </tr> </thead> <tbody> <tr><td>0</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>1</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>2</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>3</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>4</td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>					Tone Number	H.Real	H.Image	SNR	QLN	Hlog	0						1						2						3						4					
Tone Number	H.Real	H.Image	SNR	QLN	Hlog																																				
0																																									
1																																									
2																																									
3																																									
4																																									

Click **Start** to start ADSL tone diagnostics.

3.4.4.5 Diag Test

Choose **Maintenance > Diagnostics > Diag Test**. The page shown in the following figure appears. In this page, you can test the DSL connection. You can also view the LAN status connection and ADSL connection.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
System	DIAGNOSTIC TEST				
Firmware Update	The DSL Router is capable of testing your DSL connection. The individual tests are listed below. If a test displays a fail status, click "Run Diagnostic Test" button again to make sure the fail status is consistent.				
Password	SELECT THE INTERNET CONNECTION				
Diagnostics	<div>pppoe1</div> <input type="button" value="Run Diagnostic Test"/>				
System Log					
Logout					

3.4.5 System Log

Choose **Maintenance > System Log**. The page shown in the following figure appears. This section when enabled allows the system to begin logging events based on the selected log level.

The router can only keep a limited number of log entries due to router memory constraints. If you have an external SYSLOG server, you may choose to configure external logging and all log entries will be sent to your remote server.


DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP							
System	LOG SETTING				Helpful Hints... This page allows you to enable, configure and view your router system log. The system log will keep a record of your router activity. Depending on the amount of detail you include in the log, your router can only keep a limited number of log entries due to router memory constraints. If you have an external SYSLOG server, you may choose to configure external logging and all log entries will be sent to your remote server. More...							
Firmware Update	This page is used to display the system event log table. By checking Error or Notice (or both) will set the log flag. By clicking the ">> ", it will display the newest log information below.											
Password	SETTING											
Diagnostics	Error: <input type="checkbox"/> Notice: <input type="checkbox"/>											
System Log	<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>											
Logout	REMOTE SETTING											
	Remote Log Enable: <input checked="" type="checkbox"/> Remote Log Host: <input type="text"/> <input type="button" value="Apply Changes"/>											
	EVENT LOG TABLE											
	<input type="button" value="Save Log to File"/> <input type="button" value="Clean Log Table"/>											
	Old <input type="button" value=" <<"/> <input type="button" value="<"/> <input type="button" value=">"/> <input type="button" value=">> "/> New											
	<table border="1"> <thead> <tr> <th>Time</th> <th>Index</th> <th>Type</th> <th>Log Information</th> </tr> </thead> <tbody> <tr> <td colspan="4">Page: 1/1</td> </tr> </tbody> </table>				Time	Index	Type	Log Information	Page: 1/1			
Time	Index	Type	Log Information									
Page: 1/1												

The following table describes the parameters and buttons of this page.

Field	Description
Error	When the system is likely to result in a module abnormality, the system generates an Error log.
Notice	When the system is under attack or logged in, or port status changes, the system generates a Notice log.
Remote Log Host	Send system log to remote host, maybe a domain or an IP.
Save Log to File	You can save current log table to a file.

3.4.6 Logout

Choose **Maintenance > Logout**. The page shown in the following figure appears. In this page, you can log out of the configuration page.

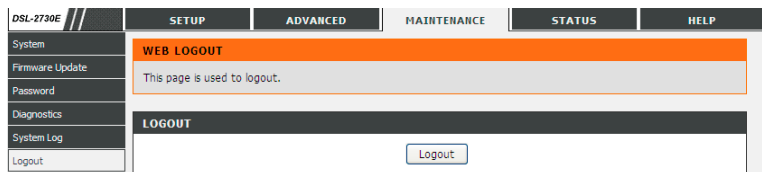

3.5 Status

You can view the system information and monitor performance

3.5.1 Device Info

Choose **Status > Device Info**. The page shown in the following figure appears. This page displays a summary overview of your router, including system information, DSL information, LAN Configuration, DNS information, WAN Configuration and so on.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP															
Device Info	ADSL ROUTER STATUS				Helpful Hints... This page displays a summary overview of your router, including system information, DSL information, LAN Configuration, DNS information, WAN Configuration and so on More...															
Wireless Clients	This page shows the current status and some basic settings of the device.																			
DHCP Clients																				
ADSL Driver																				
Statistics																				
Route Info																				
SYSTEM																				
<table border="1"> <tr><td>Alias Name</td><td>RTL867x ADSL Modem</td></tr> <tr><td>Firmware Version</td><td>SEA_1.00</td></tr> <tr><td>Uptime</td><td>0 0:0:14</td></tr> <tr><td>Date/Time</td><td>Thu Jan 1 0:0:14 1970</td></tr> <tr><td>Built Date</td><td>Jan 17 2013 15:11:22</td></tr> <tr><td>Serial Number</td><td>001111111111</td></tr> </table>						Alias Name	RTL867x ADSL Modem	Firmware Version	SEA_1.00	Uptime	0 0:0:14	Date/Time	Thu Jan 1 0:0:14 1970	Built Date	Jan 17 2013 15:11:22	Serial Number	001111111111			
Alias Name	RTL867x ADSL Modem																			
Firmware Version	SEA_1.00																			
Uptime	0 0:0:14																			
Date/Time	Thu Jan 1 0:0:14 1970																			
Built Date	Jan 17 2013 15:11:22																			
Serial Number	001111111111																			
DSL																				
<table border="1"> <tr><td>Operational Status</td><td>--</td></tr> <tr><td>Upstream Speed</td><td>--</td></tr> <tr><td>Downstream Speed</td><td>--</td></tr> </table>					Operational Status	--	Upstream Speed	--	Downstream Speed	--										
Operational Status	--																			
Upstream Speed	--																			
Downstream Speed	--																			
LAN CONFIGURATION																				
<table border="1"> <tr><td>IP Address</td><td>192.168.1.1</td></tr> <tr><td>Subnet Mask</td><td>255.255.255.0</td></tr> <tr><td>DHCP Server</td><td>Enable</td></tr> <tr><td>MAC Address</td><td>00:11:11:11:11:11</td></tr> </table>					IP Address	192.168.1.1	Subnet Mask	255.255.255.0	DHCP Server	Enable	MAC Address	00:11:11:11:11:11								
IP Address	192.168.1.1																			
Subnet Mask	255.255.255.0																			
DHCP Server	Enable																			
MAC Address	00:11:11:11:11:11																			
WIRELESS INFO																				
<table border="1"> <tr><td>Status:</td><td>Enabled</td></tr> <tr><td>MAC Address:</td><td>00:05:1D:03:04:05</td></tr> <tr><td>Network Name (SSID):</td><td>WLAN_0j0</td></tr> <tr><td>Current Channel:</td><td>1</td></tr> <tr><td>Encryption:</td><td>Disabled</td></tr> </table>					Status:	Enabled	MAC Address:	00:05:1D:03:04:05	Network Name (SSID):	WLAN_0j0	Current Channel:	1	Encryption:	Disabled						
Status:	Enabled																			
MAC Address:	00:05:1D:03:04:05																			
Network Name (SSID):	WLAN_0j0																			
Current Channel:	1																			
Encryption:	Disabled																			
DNS STATUS																				
<table border="1"> <tr><td>DNS Mode</td><td>Auto</td></tr> <tr><td>DNS Servers</td><td></td></tr> <tr><td>IPv6 DNS Mode</td><td>Auto</td></tr> <tr><td>IPv6 DNS Servers</td><td></td></tr> </table>					DNS Mode	Auto	DNS Servers		IPv6 DNS Mode	Auto	IPv6 DNS Servers									
DNS Mode	Auto																			
DNS Servers																				
IPv6 DNS Mode	Auto																			
IPv6 DNS Servers																				
WAN CONFIGURATION																				
<table border="1"> <thead> <tr> <th>Interface</th> <th>VPI/VCI</th> <th>Encap</th> <th>Route</th> <th>Protocol</th> <th>IP Address</th> <th>Gateway</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>pppoe1</td> <td>0/100</td> <td>LLC</td> <td>On</td> <td>PPPoE</td> <td>0.0.0.0</td> <td>0.0.0.0</td> <td>down</td> </tr> </tbody> </table>					Interface	VPI/VCI	Encap	Route	Protocol	IP Address	Gateway	Status	pppoe1	0/100	LLC	On	PPPoE	0.0.0.0	0.0.0.0	down
Interface	VPI/VCI	Encap	Route	Protocol	IP Address	Gateway	Status													
pppoe1	0/100	LLC	On	PPPoE	0.0.0.0	0.0.0.0	down													
WAN IPV6 CONFIGURATION																				
<table border="1"> <thead> <tr> <th>Interface</th> <th>VPI/VCI</th> <th>Encap</th> <th>Protocol</th> <th>IPv6 Address</th> <th>Gateway</th> <th>Route</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>pppoe1</td> <td>0/100</td> <td>LLC</td> <td>PPPoE</td> <td></td> <td></td> <td></td> <td>down</td> </tr> </tbody> </table>					Interface	VPI/VCI	Encap	Protocol	IPv6 Address	Gateway	Route	Status	pppoe1	0/100	LLC	PPPoE				down
Interface	VPI/VCI	Encap	Protocol	IPv6 Address	Gateway	Route	Status													
pppoe1	0/100	LLC	PPPoE				down													
<input type="button" value="Refresh"/>																				

3.5.2 Wireless Clients

Choose **Status > Wireless Clients**. The page shown in the following figure appears. This table shows the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client.

DSL-2730E //	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP												
Device Info	ACTIVE WIRELESS CLIENT TABLE																
Wireless Clients	This table shows the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client.																
DHCP Clients	ACTIVE WIRELESS CLIENT TABLE																
ADSL Driver																	
Statistics																	
Route Info																	
	<table> <tr> <th>MAC Address</th><th>Tx Packet</th><th>Rx Packet</th><th>Tx Rate (Mbps)</th><th>Power Saving</th><th>Expired Time (s)</th></tr> <tr> <td>None</td><td>---</td><td>---</td><td>---</td><td>---</td><td>---</td></tr> </table>					MAC Address	Tx Packet	Rx Packet	Tx Rate (Mbps)	Power Saving	Expired Time (s)	None	---	---	---	---	---
MAC Address	Tx Packet	Rx Packet	Tx Rate (Mbps)	Power Saving	Expired Time (s)												
None	---	---	---	---	---												
	<input type="button" value="Refresh"/>																

3.5.3 DHCP Clients

Choose **Status > DHCP Clients**. The page shown in the following page appears. This page displays all client devices that obtain IP addresses from the device. You can view the host name, IP address, MAC address and time expired(s).

DSL-2730E //	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP					
Device Info	ACTIVE DHCP CLIENT TABLE									
Wireless Clients	This table shows the assigned IP address, MAC address and time expired for each DHCP leased client.									
DHCP Clients										
ADSL Driver										
Statistics										
Route Info										
	<table><tr><td>Name</td><td>IP Address</td><td>MAC Address</td><td>Expiry</td><td>Type</td></tr></table>					Name	IP Address	MAC Address	Expiry	Type
Name	IP Address	MAC Address	Expiry	Type						
	<div>Refresh</div>									

3.5.4 ADSL Driver

Choose **Status > ADSL Driver**. The page shown in the following page appears. This page displays all ADSL statistics information, including link down or on, downstream and upstream, type, line coding and so on.

The screenshot displays the DSL-2730E web interface. The top navigation bar includes tabs for **SETUP**, **ADVANCED**, **MAINTENANCE**, **STATUS**, and **HELP**. The left sidebar contains links for **Device Info**, **Wireless Clients**, **DHCP Clients**, **ADSL Driver** (selected), **Statistics**, and **Route Info**. The main content area is titled **ADSL CONFIGURATION** and contains a message: "This page shows the setting of the ADSL Router." Below this is a table titled **ADSL** showing various status and statistics.

Adsl Line Status	ACTIVATING.
Adsl Mode	--
Up Stream	--
Down Stream	--
Attenuation Down Stream	--
Attenuation Up Stream	--
SNR Margin Down Stream	--
SNR Margin Up Stream	--
Vendor ID	RETK
Firmware Version	4923c106
CRC Errors	--
Up Stream BER	--
Down Stream BER	--
Up Output Power	--
Down Output Power	--
ES	--
SES	--
UAS	--

At the bottom of the main content area, there are two buttons: **Retrain** and **Refresh**.

3.5.5 Statistics

Choose **Status > Statistics**. The page shown in the following page appears. This is a summary of the number of packets that have passed between the WAN and the LAN since the router was last initialized.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP																																																																																																									
Device Info	STATISTICS This page shows the packet statistics for transmission and reception regarding to network interface.				Helpful Hints... This is a summary of the number of packets that have passed between the WAN and the LAN since the router was last initialized. More...																																																																																																									
Wireless Clients	STATISTICS																																																																																																													
DHCP Clients	<table border="1"> <thead> <tr> <th>Interface</th> <th>Rx pkt</th> <th>Rx err</th> <th>Rx drop</th> <th>Tx pkt</th> <th>Tx err</th> <th>Tx drop</th> </tr> </thead> <tbody> <tr><td>e1</td><td>1176</td><td>0</td><td>0</td><td>1720</td><td>0</td><td>0</td></tr> <tr><td>a0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a2</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a3</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a4</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a5</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a6</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>a7</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>w1</td><td>24283</td><td>0</td><td>0</td><td>3228</td><td>0</td><td>21</td></tr> <tr><td>w2</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>w3</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>w4</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>w5</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> </tbody> </table>					Interface	Rx pkt	Rx err	Rx drop	Tx pkt	Tx err	Tx drop	e1	1176	0	0	1720	0	0	a0	0	0	0	0	0	0	a1	0	0	0	0	0	0	a2	0	0	0	0	0	0	a3	0	0	0	0	0	0	a4	0	0	0	0	0	0	a5	0	0	0	0	0	0	a6	0	0	0	0	0	0	a7	0	0	0	0	0	0	w1	24283	0	0	3228	0	21	w2	0	0	0	0	0	0	w3	0	0	0	0	0	0	w4	0	0	0	0	0	0	w5	0	0	0	0	0	0
Interface	Rx pkt	Rx err	Rx drop	Tx pkt		Tx err	Tx drop																																																																																																							
e1	1176	0	0	1720		0	0																																																																																																							
a0	0	0	0	0	0	0																																																																																																								
a1	0	0	0	0	0	0																																																																																																								
a2	0	0	0	0	0	0																																																																																																								
a3	0	0	0	0	0	0																																																																																																								
a4	0	0	0	0	0	0																																																																																																								
a5	0	0	0	0	0	0																																																																																																								
a6	0	0	0	0	0	0																																																																																																								
a7	0	0	0	0	0	0																																																																																																								
w1	24283	0	0	3228	0	21																																																																																																								
w2	0	0	0	0	0	0																																																																																																								
w3	0	0	0	0	0	0																																																																																																								
w4	0	0	0	0	0	0																																																																																																								
w5	0	0	0	0	0	0																																																																																																								
ADSL Driver																																																																																																														
Statistics																																																																																																														
Route Info																																																																																																														
<input type="button" value="Refresh"/>																																																																																																														

3.5.6 Route Info

Choose **Status > Route Info**. The page shown in the following page appears.

This table shows a list of destination routes commonly accessed by your network.

DSL-2730E	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP								
Device Info	IP ROUTE TABLE This table shows a list of destination routes commonly accessed by your network.				Helpful Hints... Displays the list of the ADSL router's routing table. More...								
Wireless Clients	CURRENT IP ROUTING TABLE												
DHCP Clients	<table border="1"> <thead> <tr> <th>Destination</th> <th>Subnet Mask</th> <th>NextHop</th> <th>Interface</th> </tr> </thead> <tbody> <tr> <td>192.168.1.1</td> <td>255.255.255.255</td> <td>*</td> <td>e1</td> </tr> </tbody> </table>					Destination	Subnet Mask	NextHop	Interface	192.168.1.1	255.255.255.255	*	e1
Destination	Subnet Mask	NextHop	Interface										
192.168.1.1	255.255.255.255	*	e1										
ADSL Driver													
Statistics													
Route Info													
<input type="button" value="Refresh"/>													

3.6 Help

In the main interface, click **Help** tab to enter the **Help** menu as shown in the following figure. This section provides detailed configuration information for the device. Click a link to view corresponding information.

DSL-2730E //	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Menu	<div> HELP MENU <ul style="list-style-type: none"> Setup Advanced Maintenance Status </div>				
Setup					
Advanced					
Maintenance					
Status					
Support	<div> SETUP HELP <ul style="list-style-type: none"> Local Network Internet Setup Wireless Setup Time and Date </div>				
	<div> ADVANCED HELP <ul style="list-style-type: none"> Advanced Wireless Access Control List Port Traversal Port Forwarding DMZ Parental Control Filtering Options QoS settings DNS <ul style="list-style-type: none"> Dynamic DNS Network Tools Routing NAT </div>				
	<div> MAINTENANCE HELP <ul style="list-style-type: none"> System Firmware Update Password Diagnostics System Log Logout </div>				
	<div> STATUS HELP <ul style="list-style-type: none"> Device Info Wireless Clients DHCP Clients ADSL Driver Statistics Route Info </div>				